



User's Manual

Line Scan Camera

Type: SUi7440



NIPPON ELECTRO-SENSORY DEVICES CORPORATION

For Customers in U.S.A.

This equipment has been tested and found to comply with the limits for a Class A digital device, in accordance with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his or her own expense.

For Customers in the EU

This equipment has been tested and found to comply with the essential requirements of the EMC Directive 2004/108/EC, based on the following specifications applied:

EU Harmonised Standards

EN55022:2010 Class A

EN61000-6-2:2005

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Directive on Waste Electrical and Electronic Equipment (WEEE)



Please return all End of Life NED products to the distributor from whom the product was purchased for adequate recycling and / or disposal. All costs of returning the Product to NED are borne by the shipper.

Introduction

Thank you for purchasing NED's Line Scan Camera. We look forward to your continued custom in the future.

For safety use

- ◆ For your protection, please read these safety instructions completely before operating the product and keep this manual for future reference.
- ◆ The following symbols appear next to important information regarding safe product handling.

	Warning	If the product is not handled properly, this may result in serious injury or possible death.
	Caution	If the product is not handled properly, this may result in physical injury or cause property damage.

Safety precaution



Warning

- ◆ Never disassemble or modify this product, unless otherwise specified to do so in this manual.
- ◆ When hands are wet, avoid handling this product and do not touch any of the connection cable pins or other metallic components.
- ◆ Do not operate this product in an environment that is exposed to rain or other severe external elements, hazardous gases or chemicals.
- ◆ If the product is not to be used for an extended period of time, as a safety precaution, always unplug the connection cable from the camera unit.
- ◆ If the product installation or inspection must be executed in an overhead location, please take the necessary measures to prevent the camera unit and its components from accidentally falling to the ground.
- ◆ If smoke, an abnormal odor or strange noise is emitted from the camera unit, first turn off power, then unplug the cable from the camera unit.
- ◆ This product is not intended for use in a system configuration built for critical applications.

Instructions before use

- ◆ Only operate this product within the recommended environmental temperature range.
- ◆ Use only the specified power source and voltage rating.
- ◆ Do not drop this product. Avoid exposure to strong impact and vibrations.
- ◆ Install the camera unit in a well-ventilated environment, in order to prevent the camera from overheating.
- ◆ If the camera must be installed in an environment containing dust or other particles, take required measures to protect the camera unit from dust adhesion.
- ◆ Do not unplug the cable while power is being supplied to the camera unit. To prevent product damage, always shut down the power supply before unplugging the power cable.
- ◆ When the surface of the camera window becomes dirty due to dust or grime, black smudges appear in the displayed image. Use an air blower to remove the dust particles. Dip a cotton swab into ethanol alcohol and clean the camera window. Be careful not to scratch the glass.
- ◆ Use of non-infrared lighting such as a daylight fluorescent lamp is recommended. If halogen lighting is employed, always install an infrared filter into your system configuration.
- ◆ Please note that exposure to long wavelength light outside of the sensors visible optical range can affect the image.
- ◆ Sensitivity may fluctuate depending on the spectral response level of the light source. In cases like this, changing the light source to one with a different spectral response level may reduce this problem.
- ◆ If the CCD is continually exposed to bright light which would exceed the CCD saturation for a long time, the colour filter may become faded. As far as possible, the sensor should be protected from light except when in use.
- ◆ For stabilized image capturing, turn on the power supply and execute aging for ten to twenty minutes before actually using the camera unit.
- ◆ Do not share the power supply with motor units or other devices that generate noise interference.
- ◆ The signal ground (SG) and the frame ground (FG) are connected inside the camera unit. Design the system configuration so that a loop will not be formed by the ground potential differential.
- ◆ Do not disconnect the camera while rewriting the embedded memory.
- ◆ When you change the exposure mode that is set at the NED factory, input control signal (CC1) from the capture board.

Product Warranty

Warranty Period

- ◆ The product warranty period, as a general rule, is two years from purchase; however for detailed conditions please contact the sales representative for your region/country.
- ◆ However, in some cases due to the usage environment, usage conditions and/or frequency of use, this warranty period may not be applicable.

Warranty Scope

- ◆ Product repair will be performed on a Return To Manufacturer basis. On-site maintenance will incur additional charges.
- ◆ If defects in material or workmanship occur during the warranty period, the faulty part will be replaced or repaired by us free of charge. Return shipping charges must be paid by the sender. However, the following cases fall outside of the scope of this warranty:

Exclusions from Warranty Coverage

- ◆ We will under no circumstances assume responsibility for the following cases: damage caused by fire, earthquake, other acts of a third party, other accidents, negligent or intentional misuse by the user, or other usage under extraordinary circumstances.
- ◆ Damages (e.g. loss of business profits, business interruption, etc.) resulting from use or non-use.
- ◆ Damages caused by use other than as described in this document.
- ◆ Damages resulting from malfunction due to a connected device.
- ◆ Damages resulting from repairs or modifications performed by the customer.

Fault Diagnosis

- ◆ As a general rule, in the first instance fault diagnosis should take the form of a telephone call or an email to enable us to assess the circumstances of the malfunction.
- ◆ However, depending on the customer's requests, we, or our agent, may require an additional fee for this service.

Exclusion of Liability for Compensation for Missed Opportunities

- ◆ Regardless of whether within the warranty period or not, our warranty does not cover compensation for missed opportunities for our customers, or our customers' customers, caused by a fault of our products, nor for damage to products other than our own, or related business.

Note about Product Usage

- ◆ This product has been designed and manufactured as a general-purpose product for general industry. In applications expected to be life-critical or safety-critical, the installer or user is requested to install double or triple failsafe systems.

Repair Service Outline

- ◆ The cost of dispatching engineers etc. for repair service is not included in the price of purchased and supplied goods. On request, arrangements can be made separately.

Scope of Repair Service

- ◆ The above assumes business dealings and usage to take place in the customer's region / country. In cases of business dealings and/or usage outside the customer's region/country, separate consultation is required.

Table of Contents

1 Product Outline	10
1.1 Features	10
1.2 Applications	10
1.3 Image Sensor	11
1.4 Performance Specifications	11
2 Camera Setting and Optical Interface	14
2.1 Setting Camera	14
2.2 Fixing Camera	14
2.3 Camera dimension.....	14
2.4 Optical Interface.....	15
3 Hardware	16
3.1 Camera Connection.....	16
3.2 Input / Output Connectors and Indicator	17
3.3 Connectors / Pin Assignments / Cables.....	18
3.4 Power Supply	20
4 Camera Control	21
4.1 Flow of Camera Control	21
4.1.1 Command Overview	21
4.1.2 Command Format (PC to Camera Transmission).....	21
4.1.3 Reply Format (Camera to PC Transmission).....	21
4.1.4 Camera Control Commands.....	22
4.1.5 Memory Setup Values (Factory Settings).....	24
4.2 Details on Commands	25
4.2.1 Exposure Mode	25
4.2.2 Free run Exposure Mode Scanning.....	25
4.2.3 Setting Odd Gain (1~3700 pixel)	25
4.2.4 Setting Even Gain (1~3700 pixel).....	25
4.2.5 Setting Odd Gain (3701 ~ 7400 pixel)	26
4.2.6 Setting Even Gain (3701~7400 pixel).....	26
4.2.7 Setting Odd Offset (1~3700 pixel)	26
4.2.8 Setting Even Offset (1~3700 pixel).....	26
4.2.9 Setting Odd Offset (3701 ~ 7400 pixel).....	27
4.2.10 Setting Even Offset (3701~7400 pixel)	27
4.2.11 Setting Video Output Switching.....	27
4.2.12 Setting Pixel Correction	27
4.2.13 Pixel Correction target level	28
4.2.14 User Pixel Correction data acquisition 1.....	28
4.2.15 User Pixel Correction data acquisition 2	28
4.2.16 User Pixel Correction data Save	28

4.2.17 Data level conversion selection	29
4.2.18 Data Level Adjustment Minimum Value.....	29
4.2.19 Data Level Adjustment Maximum Value.....	29
4.2.20 Generating Test Pattern	29
4.2.21 Memory Save.....	30
4.2.22 Memory Load.....	30
4.2.23 Memory Initializing (Initializing Camera Settings)	30
4.3 Digital Processing flow in FPGA.....	31
4.4 Startup.....	31
4.5 Saving and Loading Camera Settings.....	32
4.6 Serial Communication Settings	32
4.7 Video Output Format	33
4.8 Exposure Mode and Timing Chart	34
4.8.1 Free Run Exposure Mode	34
4.8.2 External Trigger Exposure Mode	35
4.9 Setting Offset	36
4.10 Setting Gain.....	37
4.11 Data Level Adjustment	38
4.12 Pixel Correction	39
4.12.1 Command Settings	40
4.12.2 Operation Method	40
4.13 Test Pattern	41
5 Confirming Camera Settings.....	42
5.1 Before Power-on	42
5.2 After Power-on	43
5.3 During Operation	45
6 Sensor Handling Instructions	46
6.1 Electrostatic Discharge and the Sensor	46
6.2 Protecting Against Dust, Oil and Scratches.....	46
6.3 Cleaning the Sensor Window	46
7 Troubleshooting.....	47
7.1 No Image.....	47
7.2 Noise on Image	49
7.3 Camera becomes hot	51
8 NC Ctrl.....	52
8.1 Overview	52
8.2 System Requirements	52
8.3 Installaton	53
8.4 Uninstall.....	53
8.5 Operation	53

8.5.1 General description	53
8.5.2 Starting NCCtrl02	53
8.5.3 Open the control setting file.....	54
8.5.4 Selecting interface and Timeout setting	55
8.5.5 Connect.....	58
8.5.6 Disconnect and exit program	58
8.5.7 Check the contents of communication	58
8.5.8 Export Parameters to text file.....	58
8.5.9 Import Parameters from text file	59
8.6 Control	59
8.6.1 Gain and Offset	60
8.6.2 Clock, Video output, Video shift, Exposure mode	61
8.6.3 Camera Memory	61
8.6.4 Pixel Correction	61
8.7 Software Upgrades	62
8.7.1 NCCtrl02 upgrades	62
8.7.2 Adding/Replacing control setting file.....	62
8.7.3 Adding/Replacing the interface Plug-in	62
8.8 Data Transmission Programming	63
8.9 Attention on use.....	63
9 Others	64
9.1 Notice	64
9.2 Contact for support	64
9.3 Product Support	65
Revision History	66

1 Product Outline

1.1 Features

- readout(40MHz)
- High resolution(7400 pixels)
- Easy connection with a variety of frame grabber boards via Camera Link interface
- Easy control of gain / offset / video output with external software.
- By use of the on-board FPGA, we have implemented pixel correction/shading correction, image data-level adjustment etc functions for all pixels.

1.2 Applications

- Inspection of Transparent panels and PCBs
- Inspection of high speed moving objects
- Flat panel display inspection
- Inspection of glass and sheet-like objects
- Printed circuit board inspection
- This camera utilizes an Intelligent Transportation System
- Outdoor surveillance

An example of Visual Inspection of PCBs is shown below.

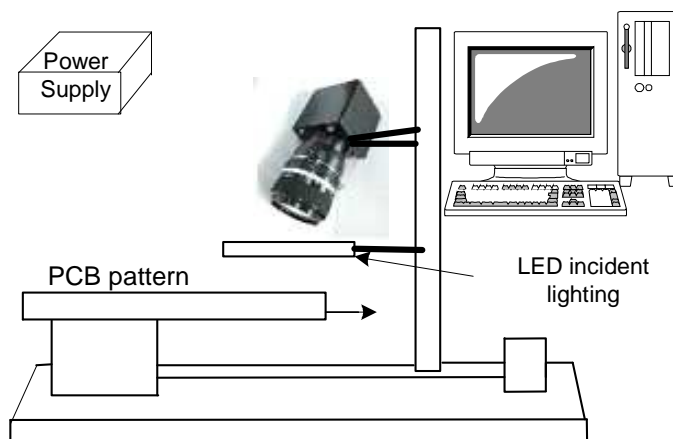


Figure 1-2-1 Visual Inspection of PCBs

Applicable Work

Printed circuit board

Performance

1. Printed circuit board size: 150mm×150mm
2. Resolution: 20μm
3. Inspection time: less than 30 seconds

Unit Configuration

1. Camera: line scan camera
2. Controller: Dedicated software for PC system
3. Size: L930 x D500 x H500 (mm)

Applicable Fields

Inspection of patterns on film PCBs

1.3 Image Sensor

The camera uses a CCD sensor with a maximum data rate of 40MHz to acquire high responsivity and superior quality images.

The pixel size is 4.7μm x 4.7μm. It outputs 7400 pixels data through 1 tap.

1.4 Performance Specifications

The Performance Specifications are shown below. Unless otherwise specified, the data shown is when the camera is operating at the maximum scan rate.

Table 1-4-1 Performance Specifications

Items	Specifications
Number of Pixels	7400
Pixel Size H x V (μm)	4.7 x 4.7
Sensor Length (mm)	34.78
Spectral Responsivity (nm)	400~800 *Peak 541
Data Rate (MHz)	40 (fixed)
Maximum Scan Rate (μs) / [kHz]	191.95 / [5.2]
Saturation Exposure (Ix/s) (typically)	0.0416 Daylight Fluorescent Light, Ta=25°C
Responsivity (typically) Analog 5V Conversion Sensitivity	120 (V/[Ix/s]) [*When shipping Gain 7.60 dB, Ta=25°C, by Daylight Fluorescent Light]
PGA Gain Adjustable Range (dB)	1.3385 to 16.0446 [VAL=54~514]

Offset Adjustable Range (LSB)	Video output 8 bit :0 to 15 *1LSB/STEP Video output 10 bit :0 to 60 *4LSB/STEP Video output 12 bit : 0 to 240 *16LSB/STEP	
Video output	Camera Link Base Configuration 8 bit :1 tap output 10 bit :1 tap output 12 bit :1 tap output	
Control Input	CC1: External Trigger Signal CC2,3,4: Not in use	
Serial communication control	SerTC, SerTFG	
Master clock (MHz)	40	
Connectors	Data/Controller	3M: MDR26 [Camera Link]
	Power Supply	Hirose: HR10G-7R-6PB (6 Pin)
Maximum cable length	10 (*Using Camera Link standard)	
Lens Mount	Nikon mount	
Operating Temperature (°C) *No Condensation	0 to 50	
Power Supply Voltage (V)	DC 12 to 15 [+/-5%]	
Consumption Current (mA) (typically)	500	
Size W x H x D (mm)	64x70x90.3	
Mass (g) (Camera only)	Under 380	
Additional Functions	<ol style="list-style-type: none"> 1. Pixel correction 2. Scan Rate Programmable time setting (at the time of Free run exposure mode) 3. Test Pattern Output 4. Data level transforming 	

The spectral Responsivity is shown below.

($T_a=25^\circ\text{C}$)

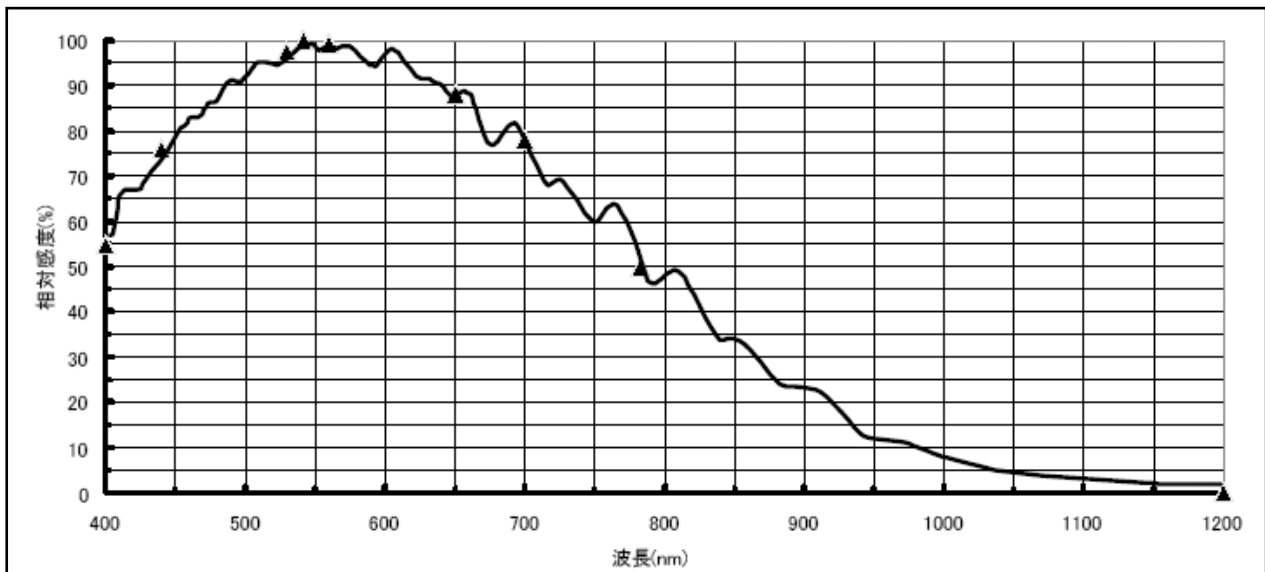


Figure 1-4-1 Spectral Responsivity

2 Camera Setting and Optical Interface

2.1 Setting Camera

The M4 screws on the front panel can be used to set the camera.

2.2 Fixing Camera

- ◆ No X-, Y-axis orientation and tilt adjustment mechanism is available. Please provide an adjustment mechanism yourself as necessary.

2.3 Camera dimension

The dimensions for the cameras are shown below.

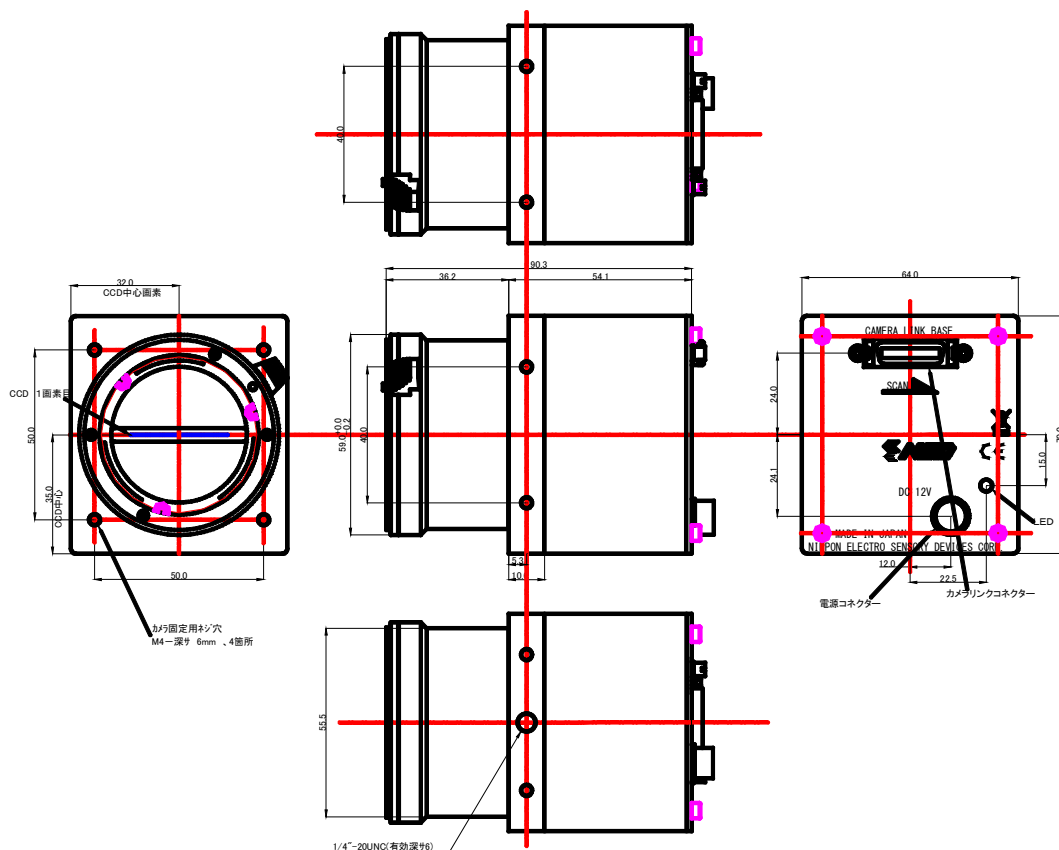


Figure 2-3-1 Dimensions(Nikon F Mount)

2.4 Optical Interface

For SUI7440, Nikon F mount is used.

The amount and wavelengths of light required to capture useful images depend on the intended use. Factors include the property, speed, the object's spectral characteristics, exposure time, the light source characteristics, the specifications of the acquisition system and so on.

The exposure amount (exposure time x light amount) is the most important factor in getting desirable images. Please determine the exposure amount after studying what is most important to your system.

Keep these guidelines in mind when setting up your light source:

- LED light sources are relatively inexpensive, provide a uniform field and longer life span compared to other light sources. However, they also require a camera with excellent sensitivity.
- Halogen light sources generally provide very little blue relative to infrared light (IR).
- Fiber-optic light distribution systems generally transmit very little blue light relative to IR.
- Metal halide light sources are very bright but have a shorter life span compared to other light sources.

Generally speaking, the brighter light sources, the shorter life span.

CCD image sensors are sensitive to infrared (IR). We recommend using daylight color fluorescent lamps that have low IR emissions. If you use a halogen light source, to prevent infrared from distorting the images use an IR cutoff filter that does not transmit IR wavelengths.

3 Hardware

3.1 Camera Connection

(1) Camera Link cables shall be used to connect the camera unit with the frame grabber board.

- ◆ If you use asymmetric Camera Link cables, connect the camera with the connector labeled as "Camera side".

(2) Connect with a power supply.

Use a power cable to connect the camera with the power source for the camera. Insert the plug end of the cable into the camera. Attach the opposite end (loose wires) to the power unit.

- ◆ Other than the above, a personal computer, a frame grabber board, a photographic lens, a photographic lens mount, a light source and an encoder are necessary, depending on the situation.

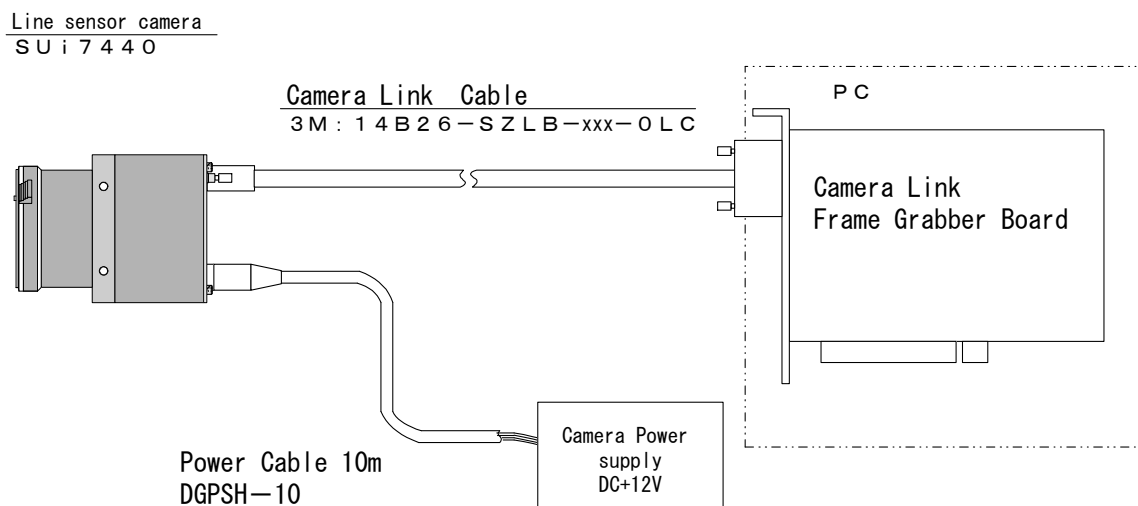


Figure 3-1-1 Connections between Camera and Frame Grabber Board and Power Supply

- ◆ There are two connectors available for the Camera Link Medium Configuration board. Always check the frame grabber board specifications before making connections.

<Note: Choosing the appropriate Camera Link cable length >

According to the Camera Link Specification, the maximum cable length is 10 m. But the maximum cable length to be able to transfer data depends on the type of cable performance and clock speed. The actual maximum transmission distance becomes less than 10 m at faster clock speeds, though the transmission distance of 10 m is feasible at slower clock speeds.

The following table shows values being calculated in accordance with the Camera Link Specification 2007.Version1.2, using a typical cable (14B26-SZLB-xxx-0LC from 3M) and frame grabber board (Solios from Matrox). Please choose the appropriate Camera Link cable type and length for your application. We recommend you perform a connection test in advance.

Table 3-1-1 calculated value of maximum cable length

Solios model	clock speed (MHz)	maximum cable length(m)
SOL 6M CL E* (20~66MHz)	40	9.8
	66	8.0
SOL 6M FC E* (20~85MHz)	75	7.6
	85	5.8

3.2 Input / Output Connectors and Indicator

The layout of input /output connectors and the indicator lamp are as follows.

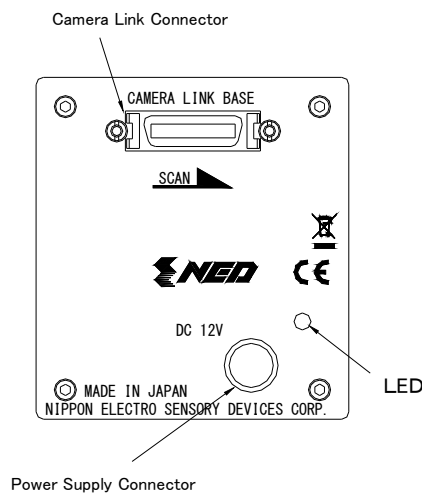


Figure 3-2-1 Input/Output Connectors and Indicator

3.3 Connectors / Pin Assignments / Cables

This camera uses the Base Configuration of the Camera Link interface standard. The figure shown below shows the interface for the camera and a typical implementation for the frame grabber interface in the case of Base Configuration.

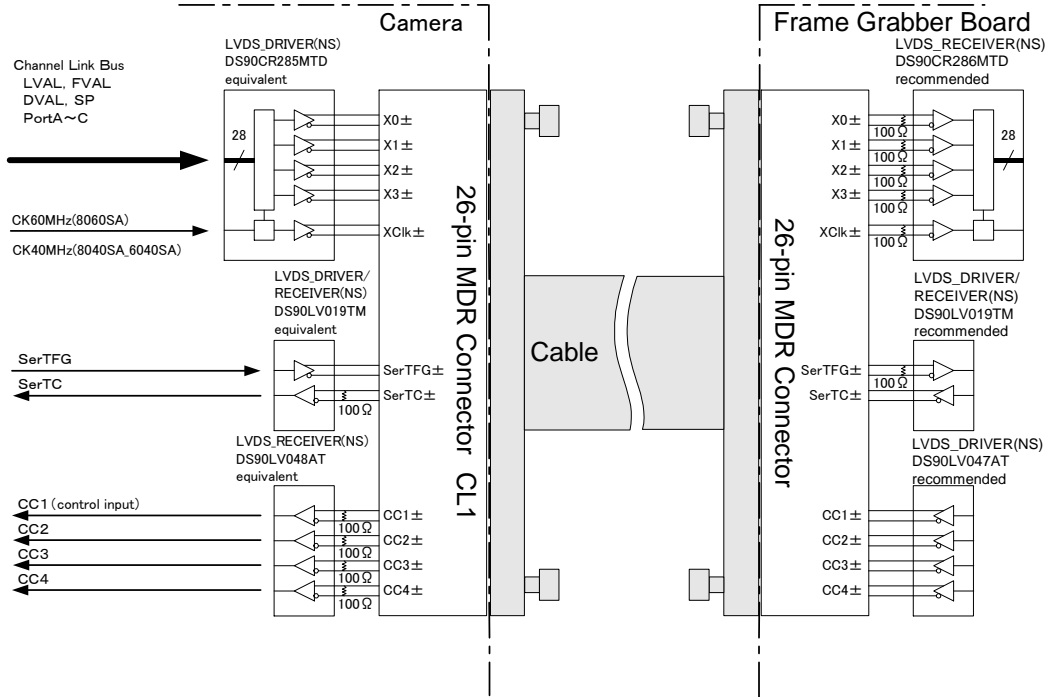


Figure 3-3-1 Camera / Frame Grabber Interface

The table below shows the Camera Link port assignments for 8bit/10bit output.

Table 3-3-1 Output data bit pin assignments

No	NAME	No	NAME	I/O
1	Inner Shield	14	Inner Shield	
2	X0-	15	X0+	Out
3	X1-	16	X1+	Out
4	X2-	17	X2+	Out
5	Xclk-	18	Xclk+	Out
6	X3-	19	X3+	Out
7	SerTC+	20	SerTC-	In
8	SerTFG-	21	SerTFG+	Out
9	CC1-	22	CC1+	In
10	CC2+	23	CC2-	In
11	CC3-	24	CC3+	In
12	CC4+	25	CC4-	In
13	Inner Shield	26	Inner Shield	

- Explanation of Signals

Inner Shield: Shield cable (GND)

X0+, X0-...X3+, X3-: Data output (Channel Link)

Xclk+, Xclk- : Clock output for above data output synchronization (Channel Link)

SerTC+, SerTC- : Serial data input (LVDS)

SerTFG+, SerTFG- : Serial data output (LVDS)

CC1+, CC1- : External synchronous signal input (LVDS) *When using External Trigger

CC2+, CC2- : Not in use (LVDS)

CC3+, CC3- : Not in use (LVDS)

CC4+, CC4- : Not in use (LVDS)

- Camera Link compatible cable

14B26 - SZLB - xxx - 0LC by 3M (or equivalent)

- ◆ Set the LVDS, Channel Link receiver side to 100-ohm termination.

- ◆ With the driver side of LVDS, even if not used, do not make it open but set the logic to H or L.

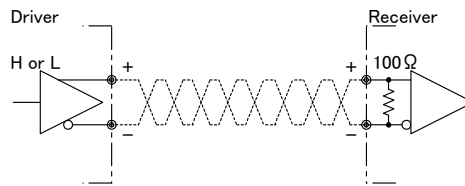


Figure 3-3-2 Circuit of LVDS

The camera has 26-pin MDR connectors for control signals of Camera Link, data signals and serial communications. The camera also has a 4-pin HIROSE connector for power supply.

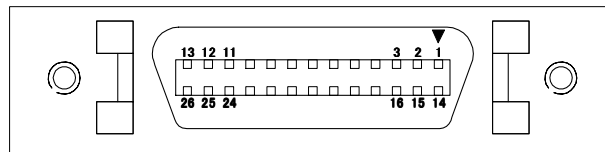


Figure 3-3-3 Camera Link Connector

- Half pitch (miniature half ribbon) shape
- Locking screw (UNC #4-40) type

- ◆ To avoid uncoupling of cable connectors during power on, make sure to clamp them with locking screws.
- ◆ Do not unplug the cable while power is being supplied to the camera.

The pin assignment of the power supply connector is shown below.

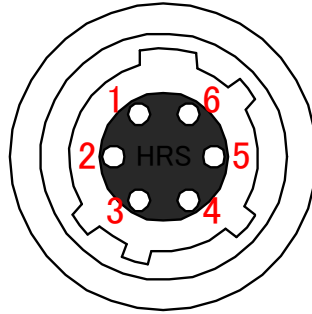


Figure 3-3-4 Power Supply Connector (HIROSE: HR10G -7R- 6PB)

- Round shape push-pull lock type

Table 3-3-2 Pin Assignment of Power Supply Connector

No	NAME
1	12 V
2	12 V
3	12 V
4	GND
5	GND
6	GND

3.4 Power Supply

The camera requires a single power supply (DC + 12 to 15 V).

- ◆ When selecting a power source, choose one with the capacity to allow for inrush current. (15W or more recommended)
- ◆ Insert the cable plug securely until it locks into position. This is to prevent the connector from coming loose during power transmission.
- Compatible Cable (Compatible plug): DGPSH -10 (HIROSE: HR10A -7P - 6S)
- Power supply voltage: DC+12 to 15 V (+/-5%)
- Consumption Current (rated): DC+12V: 440mA
- The LED lamp illuminates when +12 V power is being supplied to the camera.
- ◆ If the lamp fails to illuminate even after power is supplied, turn off power immediately. Inspect wiring. Check the voltage and capacity of the supplied power source.

4 Camera Control

The camera can be controlled through serial communication. Two methods can be used to change the camera's parameters. The first approach is to change parameters using NCCtrl (Camera control software). (See "8 NCCtrl".) Or you can also change the parameters directly from your application by using binary read/write commands to set values in the camera register.

The camera can be used without the serial interface after it has been set up correctly.

4.1 Flow of Camera Control

4.1.1 Command Overview

The serial interface uses a simple ASCII-based command.

- Communication begins when the computer sends control commands to the camera.
- The camera receives and interprets the computer commands and then executes control operation accordingly.
- Transmission ends when the camera returns the analyzed results of control commands to the computer.
- ◆ Always allow the previous transmission to end before starting the next transmission. (Only one command can be sent per transmission.)

4.1.2 Command Format (PC to Camera Transmission)

- Format 1 CMD CR
- Format 2 CMD VAL CR

CMD: Control text (1 Byte) Use 1 lowercase letters only. No numerals allowed.

CR: Carriage Return (0x0D)

VAL: Setting value (decimal, 1 Byte x maximum 7 digits)

<Example>

I CR

g70 CR

4.1.3 Reply Format (Camera to PC Transmission)

- Format 1 >R CR >[SB] CR EOT
- Format 2 (for "I" command) >OK CR >[MEM] CR > I CR EOT

> : Results start text (0x3E)

R: Camera receive command analyzed results

[SB] : Camera receive command send back

[MEM] : Memory data readout value

CR: Separated text (0x0D)

EOT: Send command all text End text (0x04)

<Example>

>OK CR >g0 CR EOT

Table 4-1-3-1 Error Messages

Camera Response	Meaning
OK	Camera executed command
CMD ERR!	Command is not valid
CMD OVR ERR!	Command text line is too long
VAL ERR!	Parameter accepted was outside of specified
MEM ERR!	Memory error

4.1.4 Camera Control Commands

The table below shows the list of Camera Control Commands.

Table 4-1-4-1 List of Camera Control Commands

Control Item	CMD	VAL1	Control Description
Exposure Mode	t	0	Free Run (Programmable setting fixed time)
		1	External Trigger(Edge Cycle)
Free run Exposure Mode scan	i	4798 ~ 524288	4798 ~ 524288 CK (191.92 μ s ~ 20.9715 ms)
Odd Gain (1 ~ 7400 pixel)	g	54~514	1.3385 ~ 16.0446 (0.0469 dB/STEP)
Odd Gain (1 ~ 3700 pixel)	gf	54~514	1.3385 ~ 16.0446 (0.0469 dB/STEP)
Odd Gain (3701 ~ 7400 pixel)	gb	54~514	1.3385 ~ 16.0446 (0.0469 dB/STEP)
Even Gain (1 ~ 7400 pixel)	G	54~514	1.3385 ~ 16.0446 (0.0469 dB/STEP)
Even Gain (1 ~ 3700 pixel)	GF	54~514	1.3385 ~ 16.0446 (0.0469 dB/STEP)
Even Gain (3701 ~ 7400 pixel)	GB	54~514	1.3385 ~ 16.0446 (0.0469 dB/STEP)
Odd Offset (1 ~ 7400 pixel)	o	0 ~ 15	8 bit : 0 ~ 15 LSB (1 LSB/STEP)
			10 bit : 0 ~ 60 LSB (4 LSB/STEP)
			12 bit : 0 ~ 240 LSB (16 LSB/STEP)
Odd Offset (1 ~ 3700 pixel)	of	0 ~ 15	8 bit : 0 ~ 15 LSB (1 LSB/STEP)
			10 bit : 0 ~ 60 LSB (4 LSB/STEP)
			12 bit : 0 ~ 240 LSB (16 LSB/STEP)
Odd Offset (3701 ~ 7400pixel)	ob	0 ~ 15	8 bit : 0 ~ 15 LSB (1 LSB/STEP)
			10 bit : 0 ~ 60 LSB (4 LSB/STEP)
			12 bit : 0 ~ 240 LSB (16 LSB/STEP)
Even Offset (1 ~ 7400 pixel)	O	0 ~ 15	8 bit : 0 ~ 15 LSB (1 LSB/STEP)
			10 bit : 0 ~ 60 LSB (4 LSB/STEP)
			12 bit : 0 ~ 240 LSB (16 LSB/STEP)

Even Offset (1 ~ 3700 pixel)	OF	0 ~ 15	8 bit : 0 ~ 15 LSB (1 LSB/STEP) 10 bit : 0 ~ 60 LSB (4 LSB/STEP) 12 bit : 0 ~ 240 LSB (16 LSB/STEP)
Even Offset (3701 ~ 7400 pixel)	OB	0 ~ 15	8 bit : 0 ~ 15 LSB (1 LSB/STEP) 10 bit : 0 ~ 60 LSB (4 LSB/STEP) 12 bit : 0 ~ 240 LSB (16 LSB/STEP)
Video Output Switching	v	0	8 bit 1 Tap
		1	10 bit 1 Tap
		6	12 bit 1 Tap
Pixel correction	C	0	Activate Factory White Pixel Correction Data
		1	User pixel correction data valid
Pixel Correction target level	M	0 ~ 4095	Set Pixel Correction Target Data Level (DN)
User Pixel Correction data acquisition 1	W		Acquire User White Pixel Correction Data
User Pixel Correction data acquisition 2	K		Acquire User Black Pixel Correction Data
User Pixel Correction data save	L		Save User Pixel Correction Data to internal memory
Select Data Level Adjustment	c	0	Deactivate Data Level Adjustment
		1	Activate Data Level Adjustment
Data Level Adjustment Minimum Value	s	0 ~ 4095	Set Data Level Adjustment Minimum Value
Data Level Adjustment Maximum Value	S	0 ~ 4095	Set Data Level Adjustment Maximum Value
Test Pattern	T	0	Test Pattern output invalid (image data output)
		1	Test Pattern output valid
Memory Save	w		Store present setup data in memory
Memory Load	l		Load and apply saved settings from memory
Memory Initializing	z		Reset to factory settings

4.1.5 Memory Setup Values (Factory Settings)

The memory setup values (factory settings) are shown below.

Table 4-1-5-1 Memory Setup Values (Factory Settings)

Control Item	CMD	VAL	Control Description
Exposure Mode	t	0	Free Run (Programmable setting fixed time)
Free run Exposure Mode scan time	i	4798	4798 CK (191.92 μ s) scan period time
Odd Gain (1 ~ 7400 pixel)	g	162	2.3982 times
Odd Gain (1 ~ 3700 pixel)	gf	162	2.3982 times
Odd Gain (3701 ~ 7400 pixel)	gb	162	2.3982 times
Even Gain (1 ~ 7400 pixel)	G	162	2.3982 times
Even Gain (1 ~ 3700 pixel)	GF	162	2.3982 times
Even Gain (3701 ~ 7400 pixel)	GB	162	2.3982 times
Odd Offset (1 ~ 7400 pixel)	o	1	1DN
Odd Offset (1 ~ 3700 pixel)	of	1	1DN
Odd Offset (3701 ~ 7400 pixel)	ob	1	1DN
Even Offset (1 ~ 7400 pixel)	O	1	1DN
Even Offset (1 ~ 3700 pixel)	OF	1	1DN
Even Offset (3701 ~ 7400 pixel)	OB	1	1DN
Video Output Switching	v	0	8 bit 1 Tap
Pixel Correction selection	C	0	Activate Factory White Pixel Correction Data
Pixel Correction target level	M	2048	Set Pixel Correction Target Data Level to 128DN
Select Data Level Adjustment	c	0	Data Level Adjustment Deactivated
Data Level Adjustment Minimum Value	s	0	Set Data Level Adjustment Minimum Value to 0DN
Data Level Adjustment Maximum Value	S	4095	Set Data Level Adjustment Maximum Value to 4095DN
Test Pattern	T	0	Off

4.2 Details on Commands

4.2.1 Exposure Mode

Sets Exposure Mode.

- Format 2 CMD VAL CR
- CMD t
- VAL 0,1

<Example>

t0 CR (Free run selection)

>OK

>t0

4.2.2 Free run Exposure Mode Scanning

Sets the exposure time.

- Format 2 CMD VAL CR
- CMD i
- VAL 4798 ~ 524288

<Example>

i 4798 CR (Setting Exposure time 191.92 μ s)

>OK

>i4798

4.2.3 Setting Odd Gain (1~3700 pixel)

Sets Odd Gain in 54 to 514.

- Format 2 CMD VAL CR
- CMD gf
- VAL 54 ~ 514

<Example>

gf100CR

>OK

> gf100

4.2.4 Setting Even Gain (1~3700 pixel)

Sets Even Gain in 54 to 514.

- Format 2 CMD VAL CR
- CMD GF
- VAL 54 ~ 514

<Example>

GF100CR

>OK

>GF100

4.2.5 Setting Odd Gain (3701 ~ 7400 pixel)

Sets Odd Gain 54 to 514.

- Format 2 CMD VAL CR
- CMD gb
- VAL 54 ~ 514

<Example>

```
gb100CR
>OK
>gb100
```

4.2.6 Setting Even Gain (3701~7400 pixel)

Sets Even Gain in 54 to 514.

- Format 2 CMD VAL CR
- CMD GB
- VAL 54 ~ 514

<Example>

```
GB100CR
>OK
>GB100
```

4.2.7 Setting Odd Offset (1~3700 pixel)

Sets Odd Offset in 0 to 15.

- Format 2 CMD VAL CR
- CMD of
- VAL 0 ~ 15

<Example>

```
of5CR
>OK
>of5
```

4.2.8 Setting Even Offset (1~3700 pixel)

Sets Even Offset in 0 to 15.

- Format 2 CMD VAL CR
- CMD OF
- VAL 0 ~ 15

<Example>

```
OF5CR
>OK
>OF5
```

4.2.9 Setting Odd Offset (3701 ~ 7400 pixel)

Sets Odd Offset in 0 to 15.

- Format 2 CMD VAL CR
- CMD ob
- VAL 0 ~ 15

<Example>

```
ob5CR
>OK
> ob5
```

4.2.10 Setting Even Offset (3701~7400 pixel)

Sets Even Offset in 0 to 15.

- Format 2 CMD VAL CR
- CMD 0B
- VAL 0 ~ 15

<Example>

```
0B5CR
>OK
>0B5
```

4.2.11 Setting Video Output Switching

Sets data format of output signal.

- Format 2 CMD VAL CR
- CMD v
- VAL 0,1,6

<Example>

```
v0 CR (8 bit output)
>OK
>v0
```

4.2.12 Setting Pixel Correction

Sets Pixel Correction.

- Format 2 CMD VAL CR
- CMD C
- VAL 0,1

<Example>

```
C0CR (Activate Factory White Pixel Correction Data)
>OK
>C0
```

4.2.13 Pixel Correction target level

Sets Pixel Correction target Data Level (DN)

- Format 2 CMD VAL CR
- CMD M
- VAL 0 ~ 4095

<Example>

```
M2048CR
>OK
>M2048
```

4.2.14 User Pixel Correction data acquisition 1

Acquires User White Pixel Correction Data

- Format 1 CMD CR
- CMD w

<Example>

```
WCR
>OK
>W
```

4.2.15 User Pixel Correction data acquisition 2

Acquires User Black Pixel Correction Data

- Format 1 CMD CR
- CMD K

<Example>

```
KCR
>OK
>K
```

4.2.16 User Pixel Correction data Save

Acquires current pixel correction data and saves it in the flash memory.

- Format 1 CMD CR
- CMD L

<Example>

```
LCR
>OK
>L
```

4.2.17 Data level conversion selection

Selects the data level conversion.

- Format 2 CMD VAL CR
- CMD c
- VAL 0,1

<Example>

```
c1CR
>OK
>c1
```

4.2.18 Data Level Adjustment Minimum Value

Sets Data Level Adjustment Minimum Value

- Format 2 CMD VAL CR
- CMD s
- VAL 0 ~ 4095

<Example>

```
s1024CR
>OK
>s1024
```

4.2.19 Data Level Adjustment Maximum Value

Sets Data Level Adjustment Maximum Value

- Format 2 CMD VAL CR
- CMD S
- VAL 0 ~ 4095

<Example>

```
S3072CR
>OK
>S3072
```

4.2.20 Generating Test Pattern

Generates test pattern.

- Format 2 CMD VAL CR
- CMD T
- VAL 0,1 (0:Image data, 1: Test pattern)

<Example>

```
T1CR (Generating test pattern)
>OK
>T1
```

4.2.21 Memory Save

Stores current camera settings in the flash memory.

- Format 1 CMD CR
- CMD w

<Example>

```
wCR
>OK
>w
```

4.2.22 Memory Load

Reads out the camera settings from the flash memory.

- Format 1 CMD CR
- CMD l

<Example>

```
lCR
>OK
>l
```

4.2.23 Memory Initializing (Initializing Camera Settings)

Resets the flash memory to the factory default.

- Format 1 CMD CR
- CMD z

<Example>

```
zCR
>OK
>z
```

4.3 Digital Processing flow in FPGA

The figure below shows the digital processing flow in the FPGA.

After the CCD output passes through A/D conversion, data is processed in the digital domain and converted to Camera Link Medium Configuration (for 8 bit output) for output.

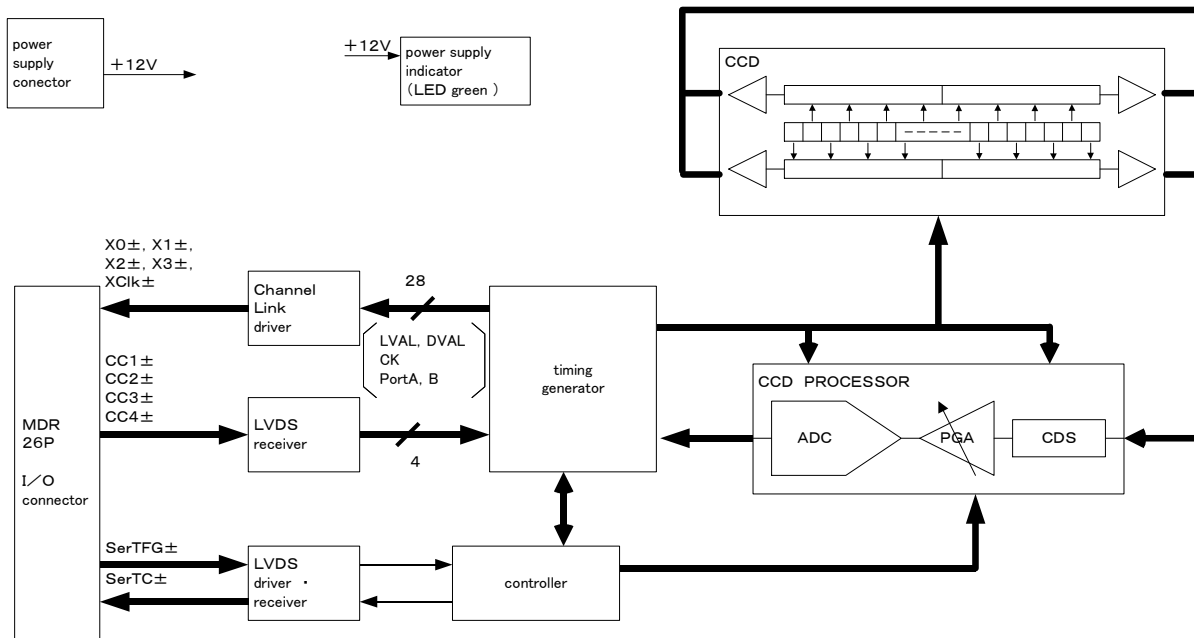


Figure 4-3-1 FPGA Processing block diagram

4.4 Startup

After turning on, the camera runs a startup procedure before it starts getting images and outputting data. It takes about four seconds.

The startup procedure is as follows.

- (1) The camera initializes the hardware.
- (2) Reads out the latest camera settings from the flash memory. (User settings if any or factory default settings)
- (3) Sets up the camera with the setting values from the flash memory.

After this sequence, the camera is ready to get images and output data.

4.5 Saving and Loading Camera Settings

The camera setting data is saved in the internal memory (flash memory) and is loaded from the memory when turning on the power supply or loading (sending the “I” command).

- The number of times the flash memory can be rewritten will vary depending on actual operational conditions. After turning on the power supply, the camera always checks the memory status. If the data is not within the designated range due to a malfunction or other type of trouble, the memory will be automatically rewritten with the factory settings.
- ◆ If disconnecting camera power while rewriting the memory, all data saved in the memory will be deleted.

As it takes several seconds to rewrite the memory, do not disconnect the power supply before receiving the response from the camera.

Commands for rewriting the memory are as follows.

- Reset to factory settings (z)
 - Store present setup data in memory (w)
 - Store pixel correction data in memory (L)
- ◆ When changing the camera setting, be sure to send the control input signal CC1 from the frame grabber board. If you do not send CC1 or send control input signals are out of the designated range, you cannot get images and cannot change the settings. See 4.8.2.

4.6 Serial Communication Settings

Serial communication is performed through the Camera Link Interface.

The table below shows the serial communication settings.

Table 4-6-1 Serial Communication Settings

Parameter Items	Setup Value
Communication Speed (Baud rate)	9600bps
Data Length	8bit
Parity Bit	None
Stop bit	1bit
Flow Control	None

4.7 Video Output Format

The camera outputs 8-bit or 10-bit digital data.

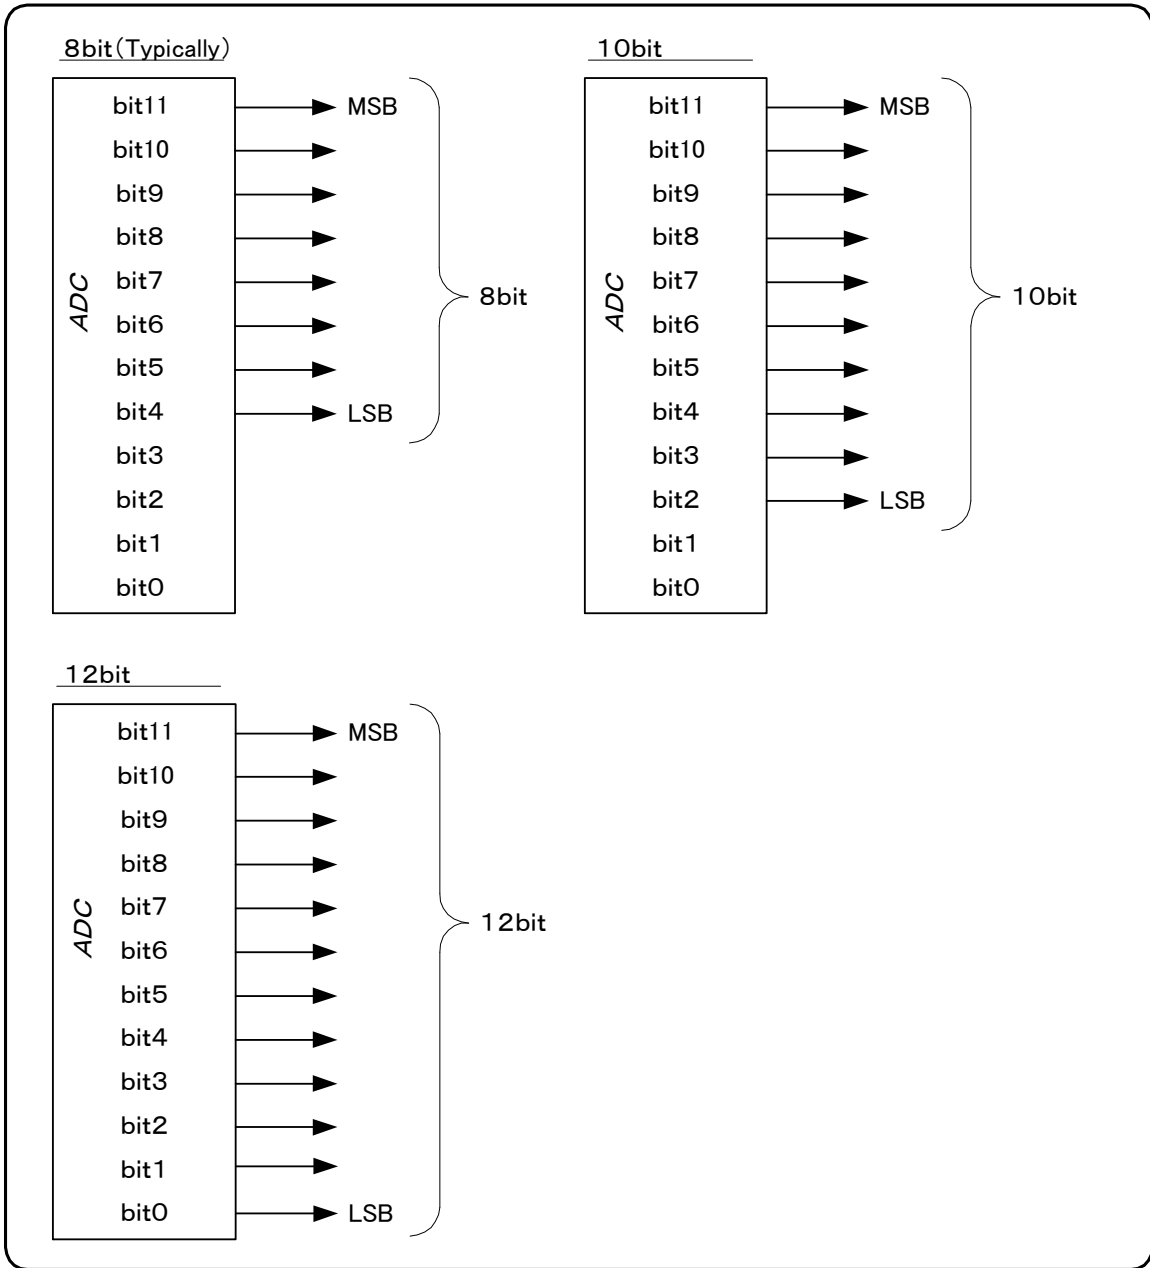


Figure 4-7-1 Pin Assignments of Digital Data

- ◆ The A/D converter of the camera has a 12-bit resolution. For 10-bit output, the upper 10-bit signal, for 8-bit output, the upper 8-bit signal is output as a video data.

The video output phase is shown below.

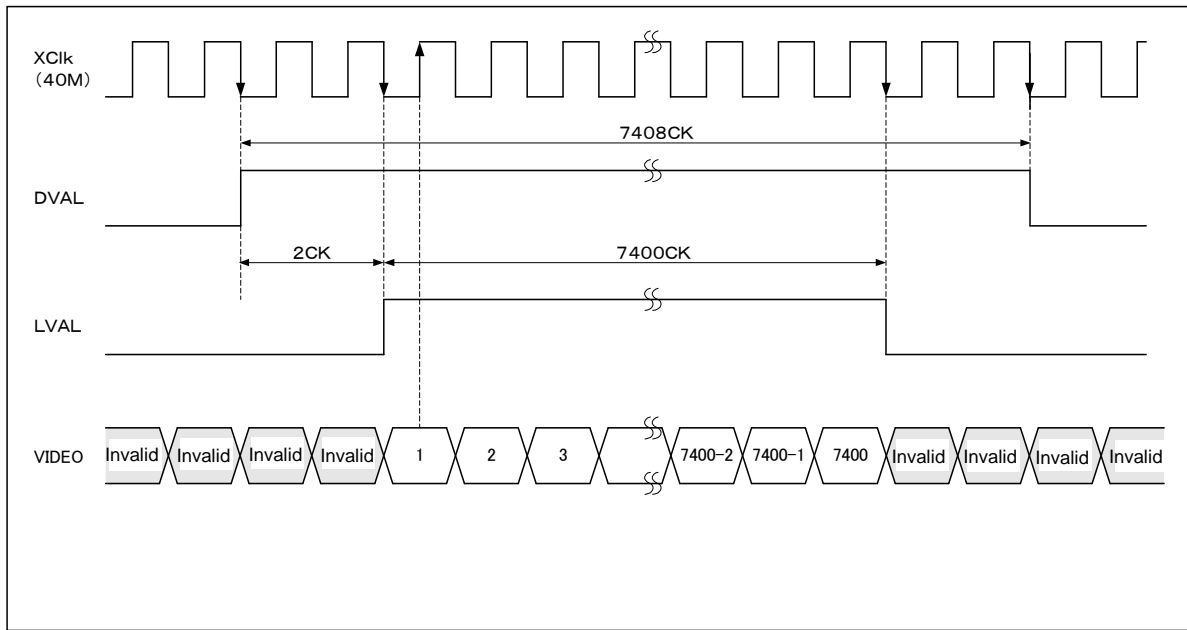


Figure 4-7-2 Video Output Phase

- ◆ FVAL = 0 (low level) fixed

4.8 Exposure Mode and Timing Chart

The camera has two exposure modes. The overview of each mode and the timing are as follows.

4.8.1 Free Run Exposure Mode

In free-run exposure mode, the camera generates its own internal control signal based on two programmable parameters, exposure time and readout time. The range of programmable exposure time and the timing chart of the exposure and the readout are shown below.

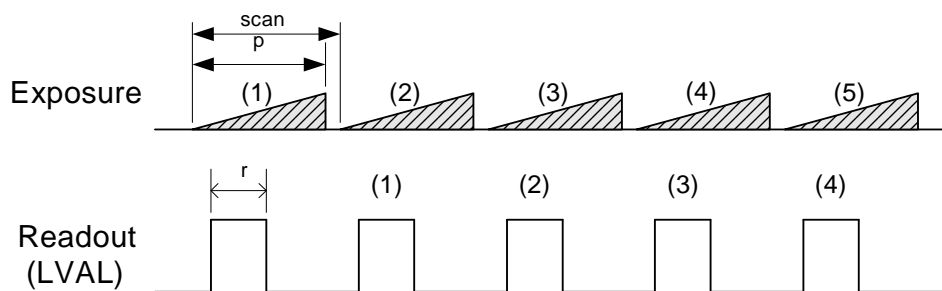


Figure 4-8-1-1 Free Run Exposure Mode

- ◆ The scan cycle (Programmable setting) can be set in the range 191.92μs~20.97ms (4798~524288CK)
- ◆ Scan Rate calculating formula Scan Rate (us) = Clocks × 0.04

4.8.2 External Trigger Exposure Mode

In external trigger exposure mode, the line period and the exposure time is determined by the setting made through the external trigger pulse (CC1) cycle. Each exposure starts with the rising edge is determined by the time from rising edge to rising edge of the trigger pulse. The range of programmable exposure time and the timing chart of the exposure and the readout are shown below.

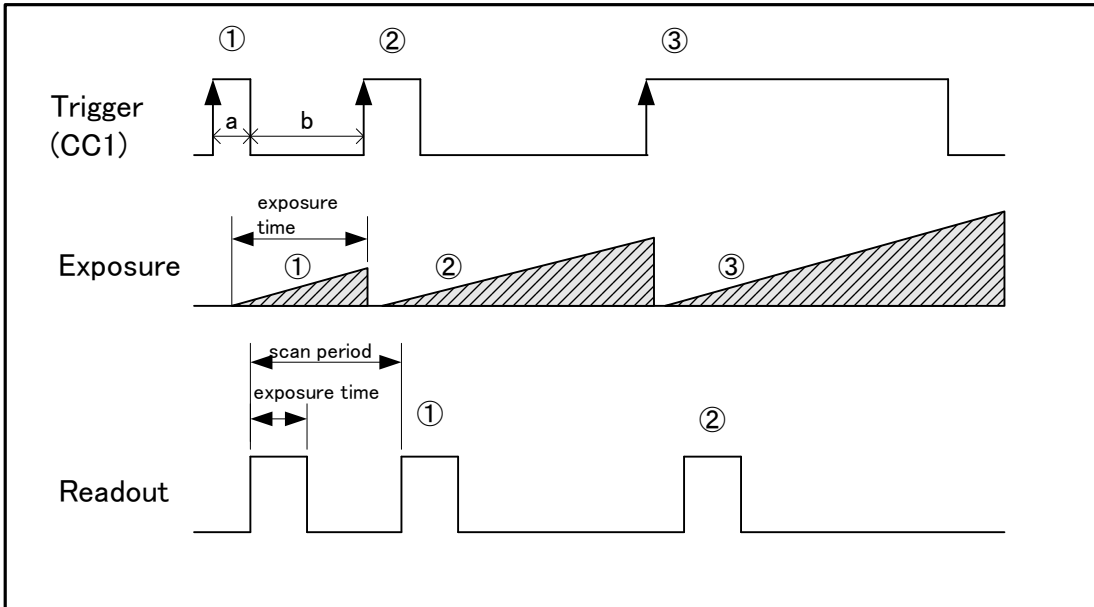


Figure 4-8-2-1 External Trigger Exposure Mode

Timing restrictions are as below:

- a: External Pulse H Time 50ns(2CK) or more
- b: External Pulse L Time 50ns(2CK) or more
- a+b: Scan Cycle is between 191.92μs~20.9715ms (4798~524288CK)

4.9 Setting Offset

In the figure below, the horizontal axis indicates the amount of incident light and the vertical axis indicates the output.

F_s shows the output at saturation. D_d shows the output at darkness. (Both F_s and D_d are digital.) S_e shows the saturation current, or the amount of exposure when the output saturates.

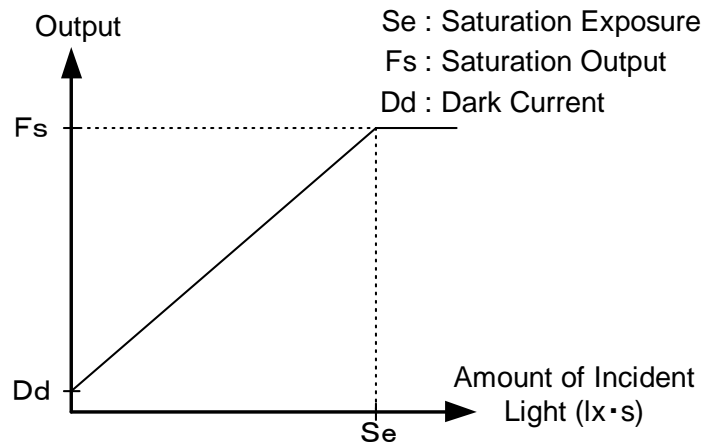


Figure 4-9-1 Saturation Exposure and Dark Current Output

By setting the offset, you can set the Y-intercept arbitrarily. DF shows the digital offset value. The gradient of the line does not change.

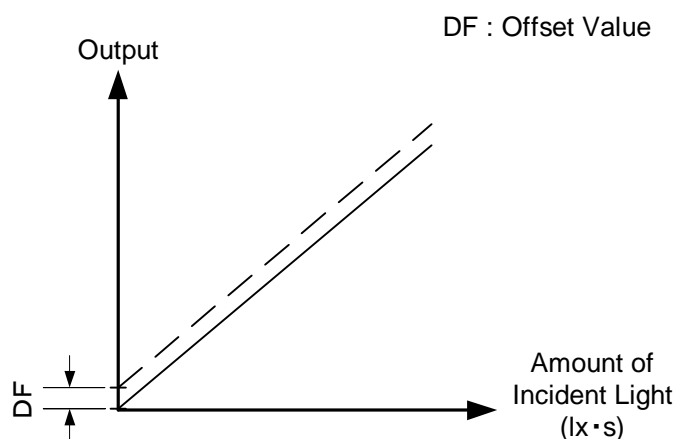


Figure 4-9-2 Offset Adjustment

- ◆ Adjust amount of offset in accordance with the requirements of your camera system.

4.10 Setting Gain

It is possible to adjust the gain setting of this camera (x1.3~16). This is done by adjusting the slope of the line in the figure below. The slope becomes steeper when you raise the gain, and saturation occurs at a lower light exposure level. On the other hand, at a lower light level, the output increases, so the sensitivity is said to have increased.

The gain can be adjusted with the command listed in the commands table. However, if you are using the User Pixel Correction function, gain can be automatically adjusted by setting the output target level.

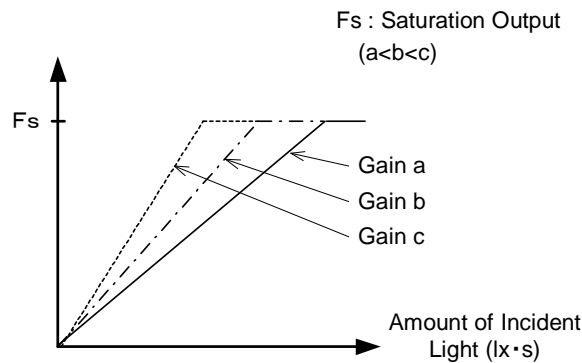


Figure 4-10-1 PGA Gain Adjustment

- ◆ Gain and noise values are proportionally related.
- ◆ Adjust the amount of gain in accordance with the requirements of your camera system.

Gain should be calculated according to the following formula:

$$G1(\text{dB}) \doteq \text{Gain code} \times 0.0469$$

$$G2(\text{multiple}) \doteq 10^{(G1 \div 20)}$$

$$\doteq 10^{(\text{Gain code} \times 0.002345)}$$

<example>

code	G1(dB)	G2(magnification)	Sensitivity V/(lx · s)
54	2.5326	1.3385	67
128	6.0032	1.9960	100
162	7.5978	2.3982	120
256	12.0064	3.9840	199
332	15.5708	6.0053	300
514	24.1066	16.0446	802

4.11 Data Level Adjustment

Contrast can be enhanced through digital processing.

The data level adjustment calculation is:

$$V_{out} = (V_{in} - Min) \times 256 \div (Max - Min)$$

V_{out} : Data Level Adjusted Output Data

V_{in} : Output Data before Adjustment

Min : Data Level Adjustment Minimum Value

Max : Data Level Adjustment Maximum Value

<Example> Data Level Adjustment Settings: Minimum 23DN, Maximum 129DN


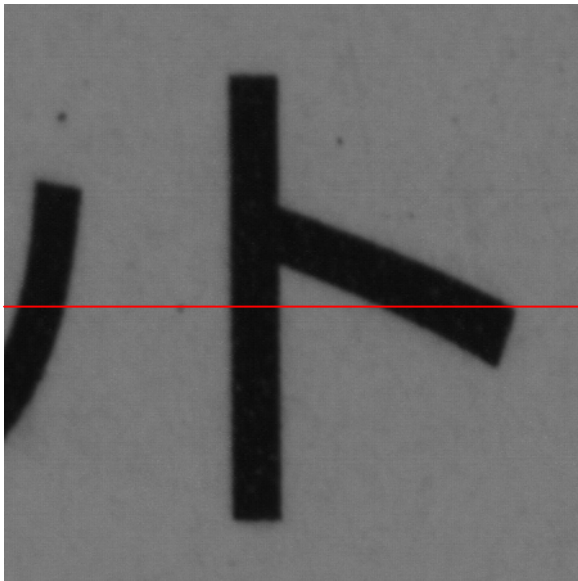


Image Before Adjustment

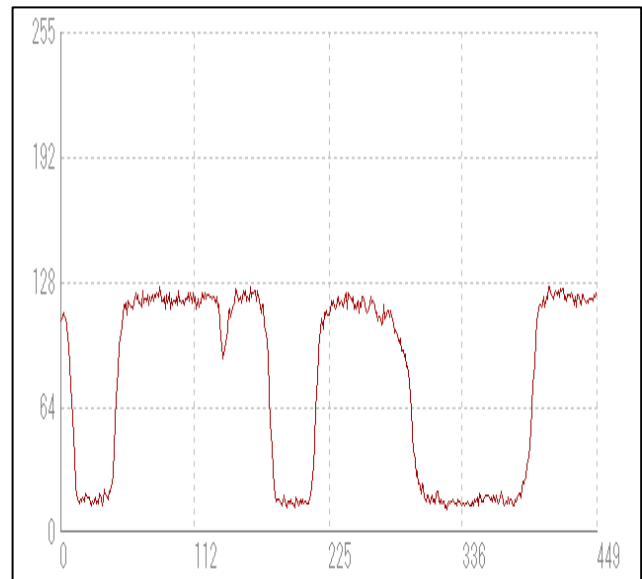

Profile of the left image at the red line


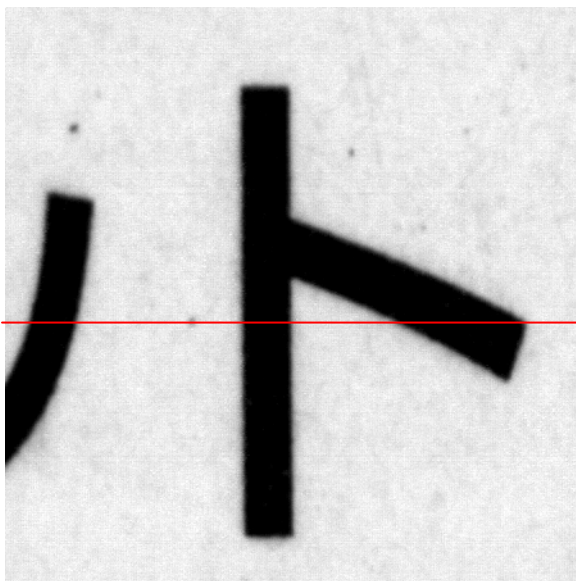


Image Before Adjustment

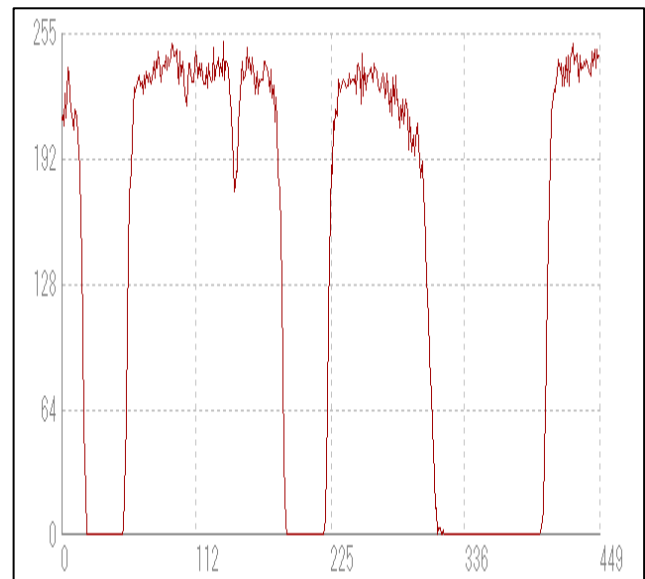

Profile of the left image at the red line


◆ Noise may increase due to data level adjustment

4.12 Pixel Correction

Generally speaking, image sensors (CCD, CMOS and so on) have fixed pattern noise and photo response non-uniformity. When you use a lens, lens shadings and light sources also can cause non-uniformity. The camera is factory set to the optimal correction before shipping in order to provide images of high grade. The camera also has a user white correction function in order to cope with lens shading and non-uniform illumination.


Cal_bl : Output data of each pixel in perfect dark (digital)
 Cal_wh : Output data of each pixel in uniform illumination (digital)
 When Vin: Input data (digital), Vout: Output data (digital),
 $Vout = (Vin - Cal_bl) \times Cal_wh$ to correct output data.

<Example> Pixel correction target level:192DN

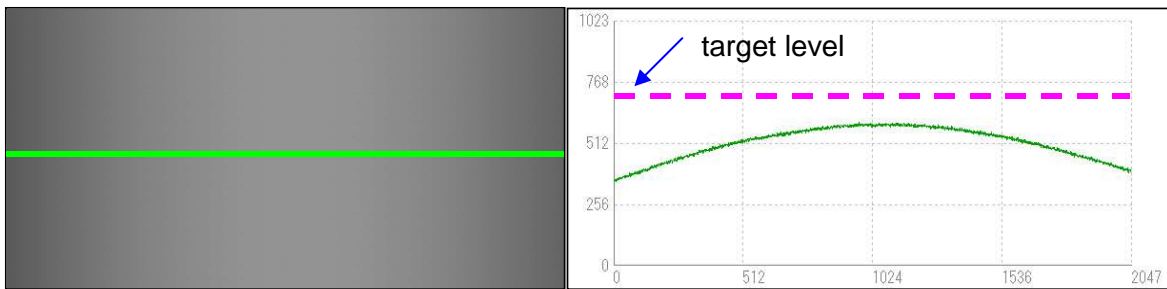

Image“before”user arbitrary pixel is corrected.

Green line is Luminance Profile

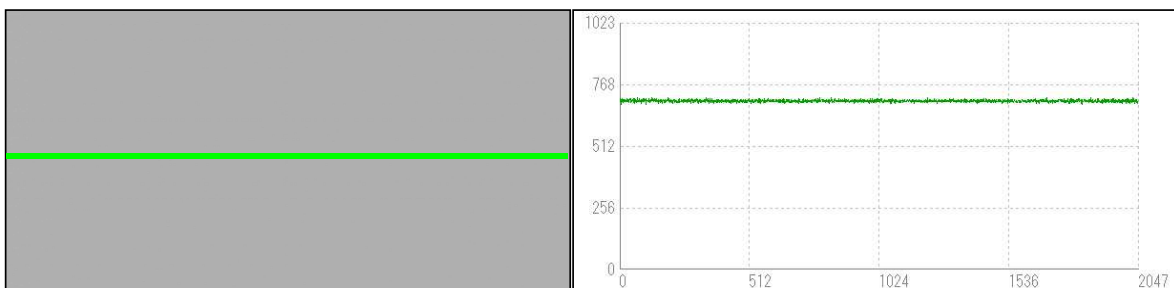

Image“after”user arbitrary pixel is corrected.

Green line is Luminance Profile

Figure 4-11-1 Waveform and image before and after bit correction

4.12.1 Command Settings

Pixel correction is switched on and off, and correction data is obtained by sending serial commands from a PC.

Command Setting List

C0: Factory pixel correction (white data active)

C1: User pixel correction (white data active)

K: User pixel correction (acquire black data)

W: User pixel correction (acquire white data)

L: Save user pixel correction data to internal memory

M[Val] : Set target data level for pixel correction

4.12.2 Operation Method

- ① Put on the lens cap to create a dark environment
- ② Send 「K CR」 via the COM port of the PC. This acquires User Black Data (256 lines average)
- ③ Confirm that the reply 「>K OK CR」 comes back from the camera.
- ④ Remove the lens cap and prepare the object to be photographed
 - ※If a lens is attached, lens and illumination shading will be corrected at the same time.
 - ※It is recommended to defocus the lens when obtaining correction data
- ⑤ Send 「W CR」 via the COM port. This acquires User White Data (256 lines average)
- ⑥ Confirm that the reply 「>W OK CR」 comes back from the camera.
- ⑦ Send 「L CR」 via the COM port. This saves User Correction Data to the internal memory/
- ⑧ Send 「M [Val] CR」 via the COM port. This sets the Pixel Correction Target Level.
 - ※If the target data level is not set higher than the acquired User White data, the full range of 8 bit data may not be used even at saturation.
- ⑨ Send 「C1 CR」 via the COM port. This activates the User Pixel Correction.
 - ※Send 「C0 CR」 to activate Factory White Correction Data.

4.13 Test Pattern

From pixel 1 to 3700, the pattern 0-255DN repeats, and pixel 3700 is 115DN. From pixel 3701 to 7400, the output is 115-0DN, then repeating 255-0DN, so that pixel 7400 is 0DN.

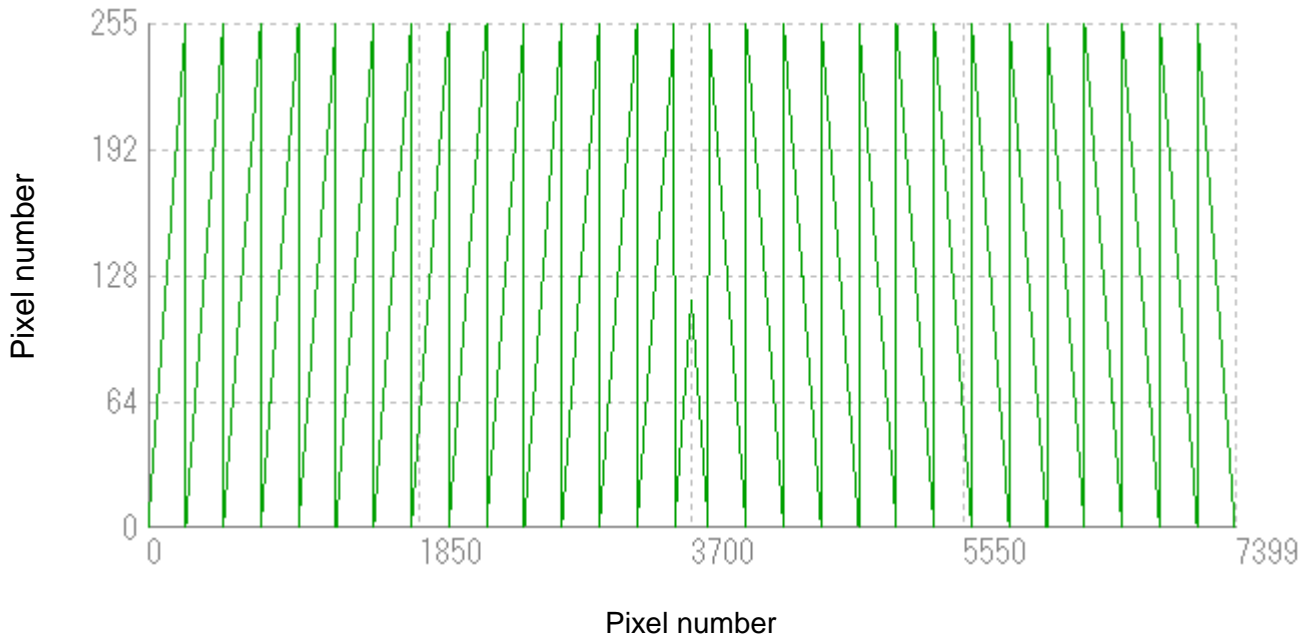


Figure 4-13-1 Test Pattern

5 Confirming Camera Settings

5.1 Before Power-on

Check that there are no dents or scratches on the casing. Dropping or bumping during transport and handling may have caused damage to connectors or internal components.

- (1) Confirm the pin assignment of the power cable.

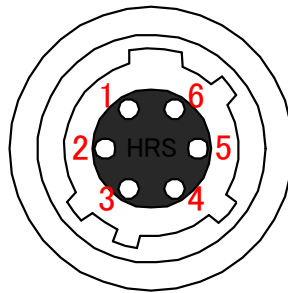


Figure 5-1-1 Pin Assignment of Power Cable

- (2) Confirm the direction and the channel of the cables. Some Camera Link cables are directional. If one of the connectors says "Camera side", connect this to the camera.

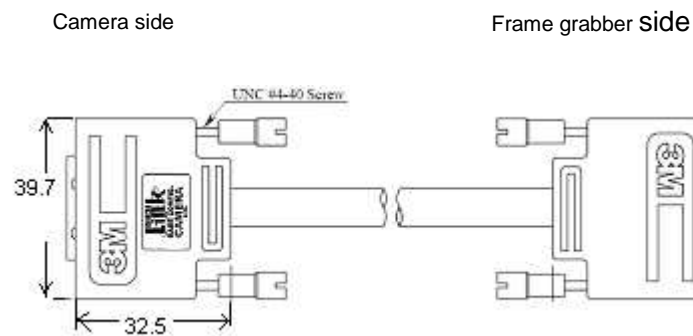


Figure 5-1-2 Connection Direction of Camera Cable

The connection channel of in the case of using a “Solios” board:

CL1 = CHANNEL #0

CL2 = CHANNEL #1

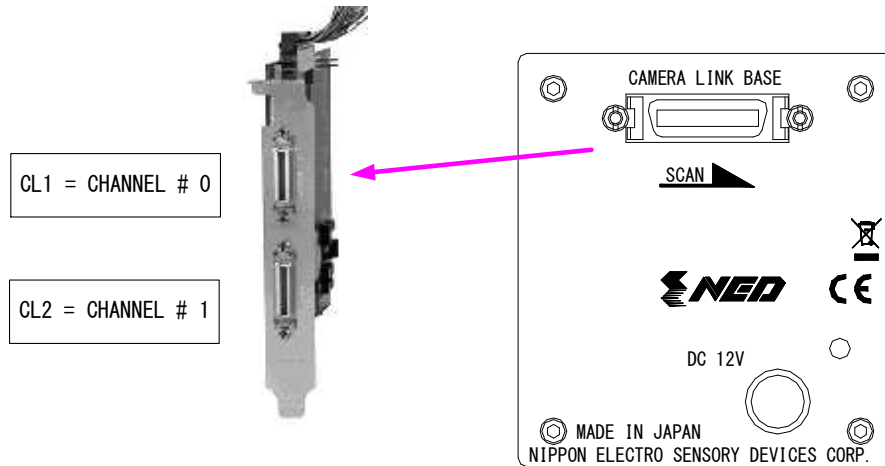


Figure 5-1-3 Channel of Camera Link Cables

5.2 After Power-on

- (1) Confirm sent and received commands using the camera control utility. Launch NCCtrl, set COM port and connect. Click “Load” and ”O.K”, then wait for the response.



Figure 5-2-1 Confirmation of Connection

- (2) Set an Exposure mode and a video output mode with the camera control utility.
Video output mode =8 bit, 10 bit or 12 bit.

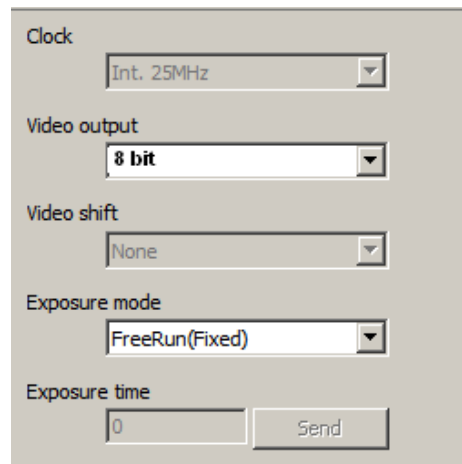


Figure 5-2-2 Video Output Mode Setting

If you have your own application to check the images, select suitable settings.

- (3) Capture images using a camera interface board utility. In the case of Matrox's Solios, it is convenient to use Intellicam.

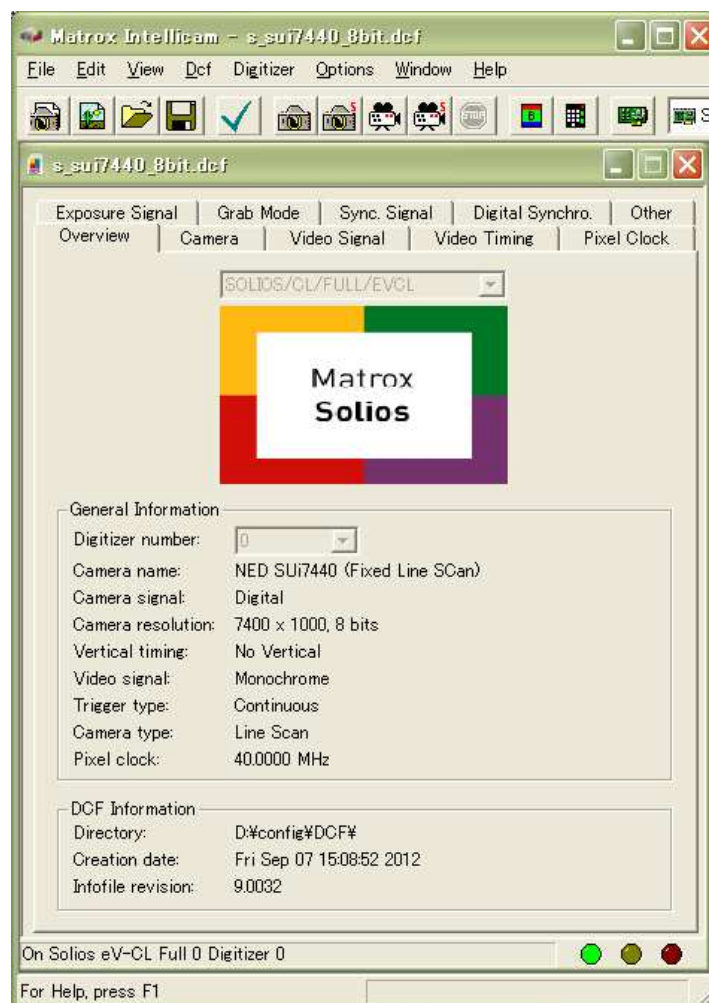


Figure 5-2-3 Solios Window

5.3 During Operation

(1) Does an acquisition time out error occur?

<Cause>

<1> Captured images are too large.

If there are many filtering processes, the assignments to the driver may be insufficient.

<2> The cable is detached from the connector

Ensure that the power cable and Camera Link cables are connected to the camera firmly.

<3> Camera Link cables are susceptible to noise when the cables are laid near a light source inverter line or a power line. The personal computer in use may freeze and need to be reset.

(2) Are there dark lines in the direction of vertical scanning on the image?

<Cause>

<1> Dust on the sensor window

Dust may get onto the sensor window from the inside or the outside of the camera. Remove the dust with air or a lens cleaner.

6 Sensor Handling Instructions

6.1 Electrostatic Discharge and the Sensor

CCD sensors are susceptible to damage from electrostatic discharge and can deteriorate as a result. Take care when handling the sensor.

6.2 Protecting Against Dust, Oil and Scratches

The CCD sensor window is part of the optical path and should be handled like other optical components with care. If you use the camera in a dusty area, prepare a dust-proof enclosure. Dust can obscure pixels, producing dark lines on the image.

6.3 Cleaning the Sensor Window

Dust: Can usually be removed by blowing the window surface using a compressed air blower.


Oil: Wipe the window with a lint-free cloth wiper moistened with ethyl alcohol carefully and slowly.


When there is dust or smudges on the sensor window, it appears in the same way as noise on the image. Please remove it appropriately.

7 Troubleshooting


The following pages contain several troubleshooting charts that can help you find the cause of problems users sometimes encounter.


7.1 No Image

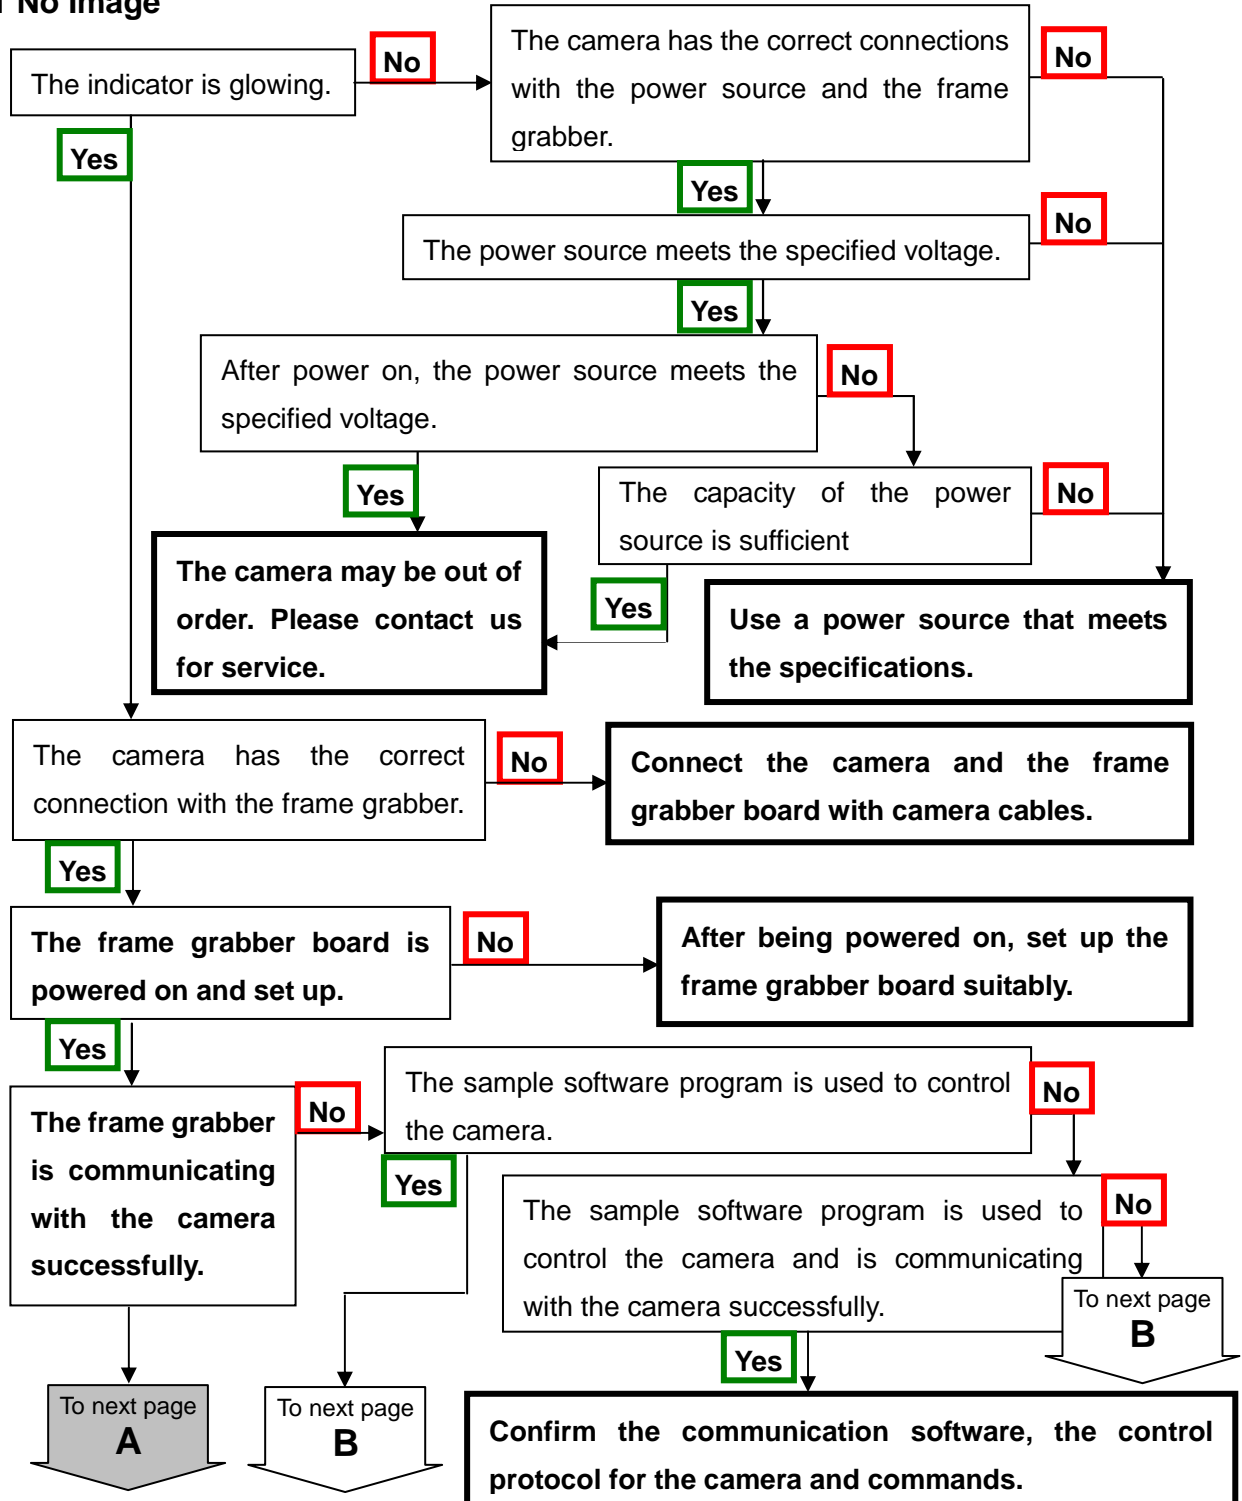

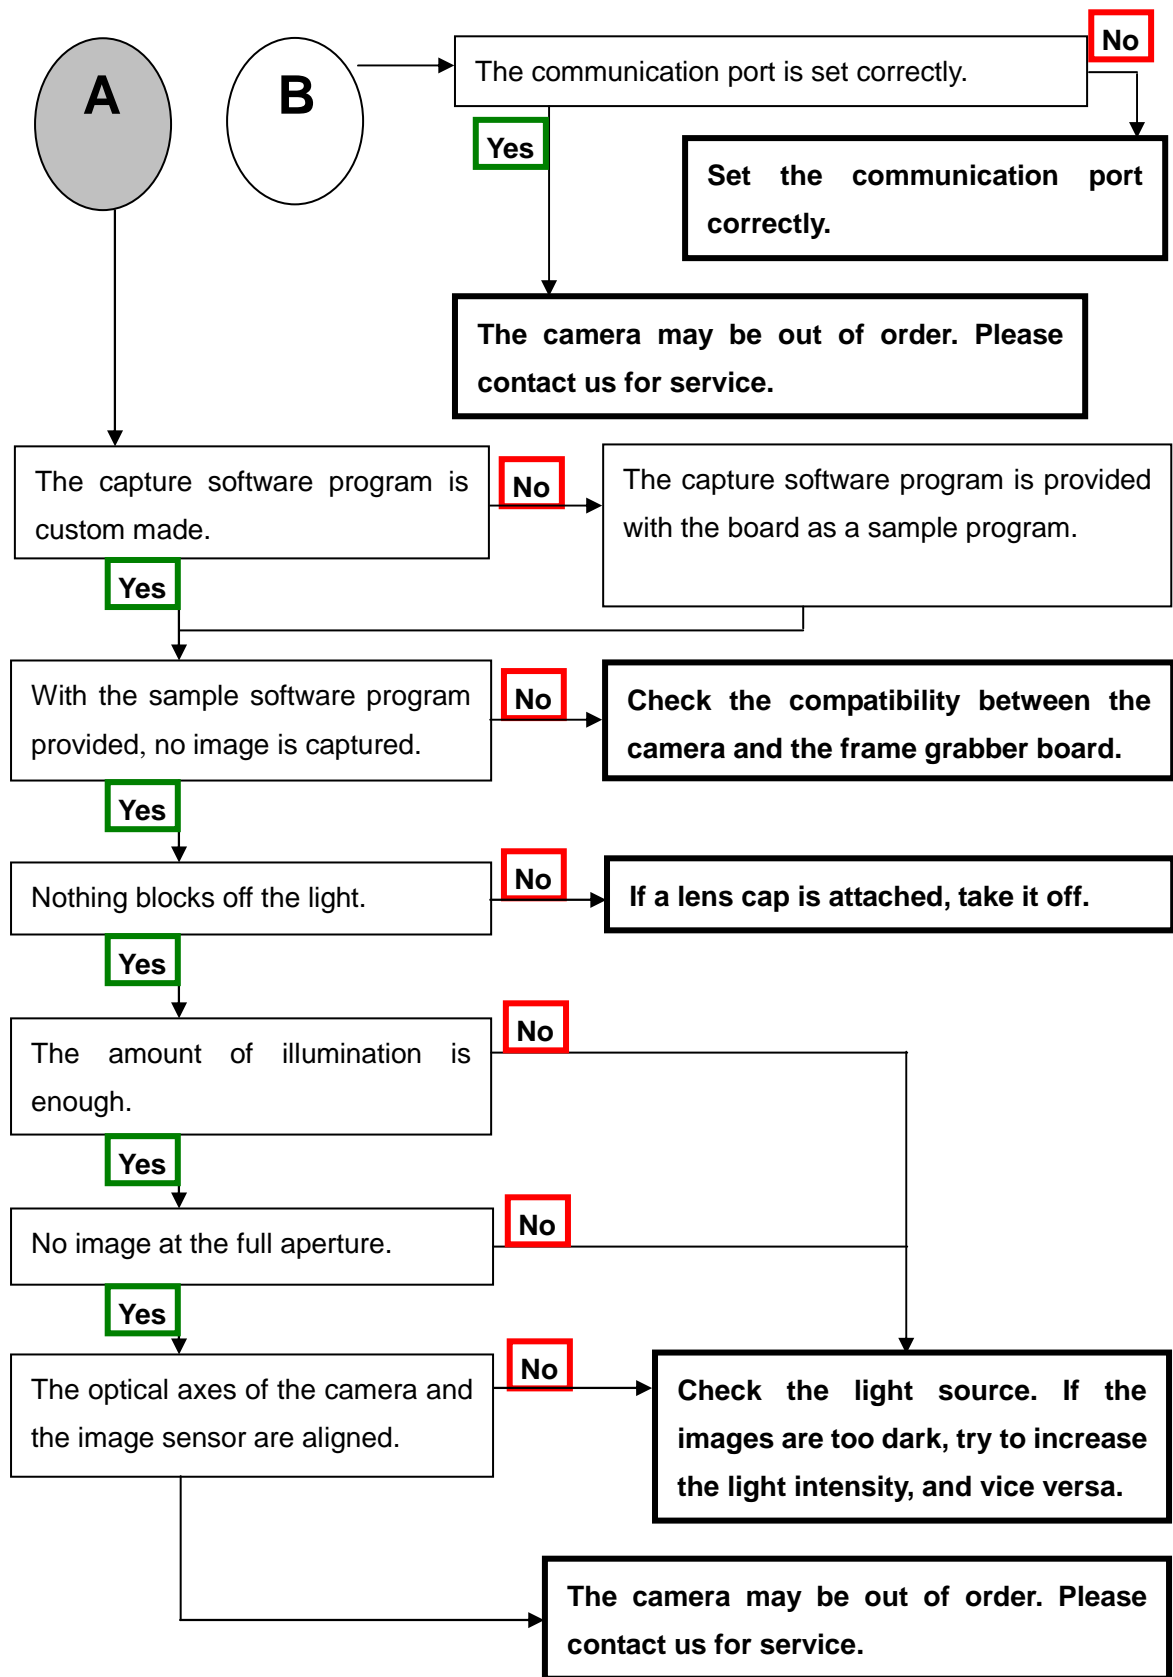


7.2 Noise on Image

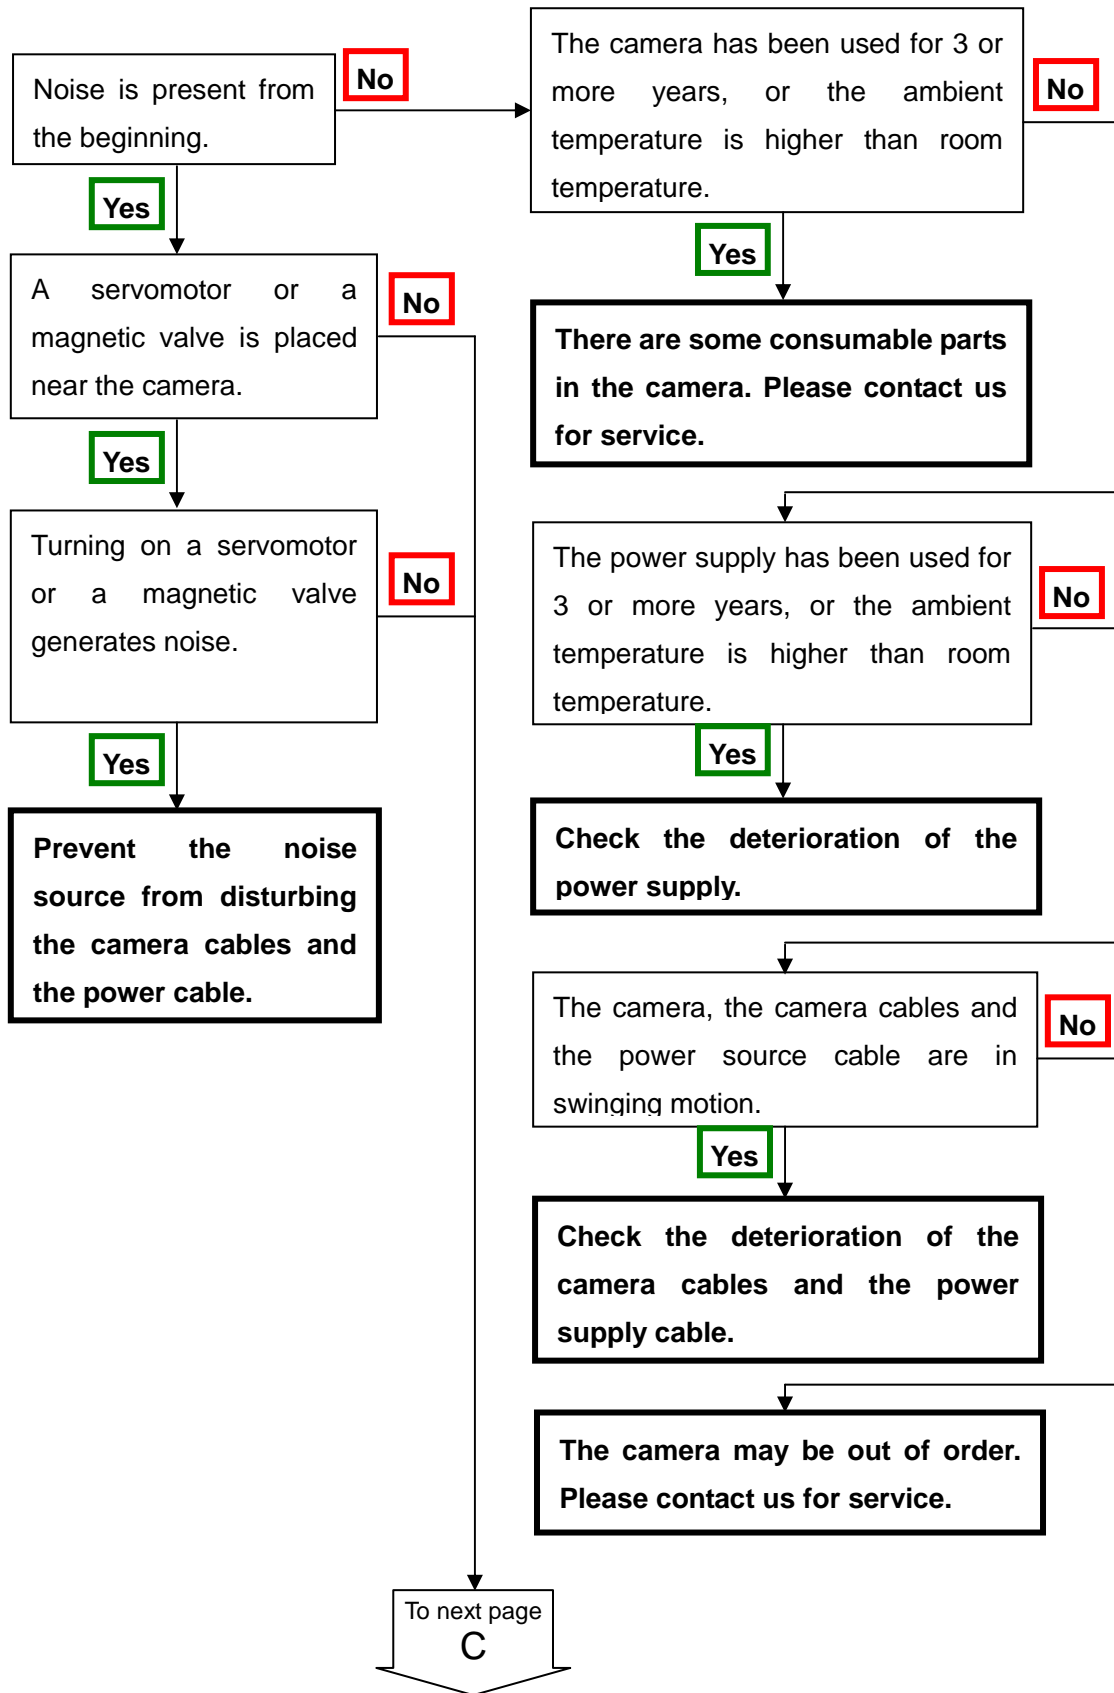

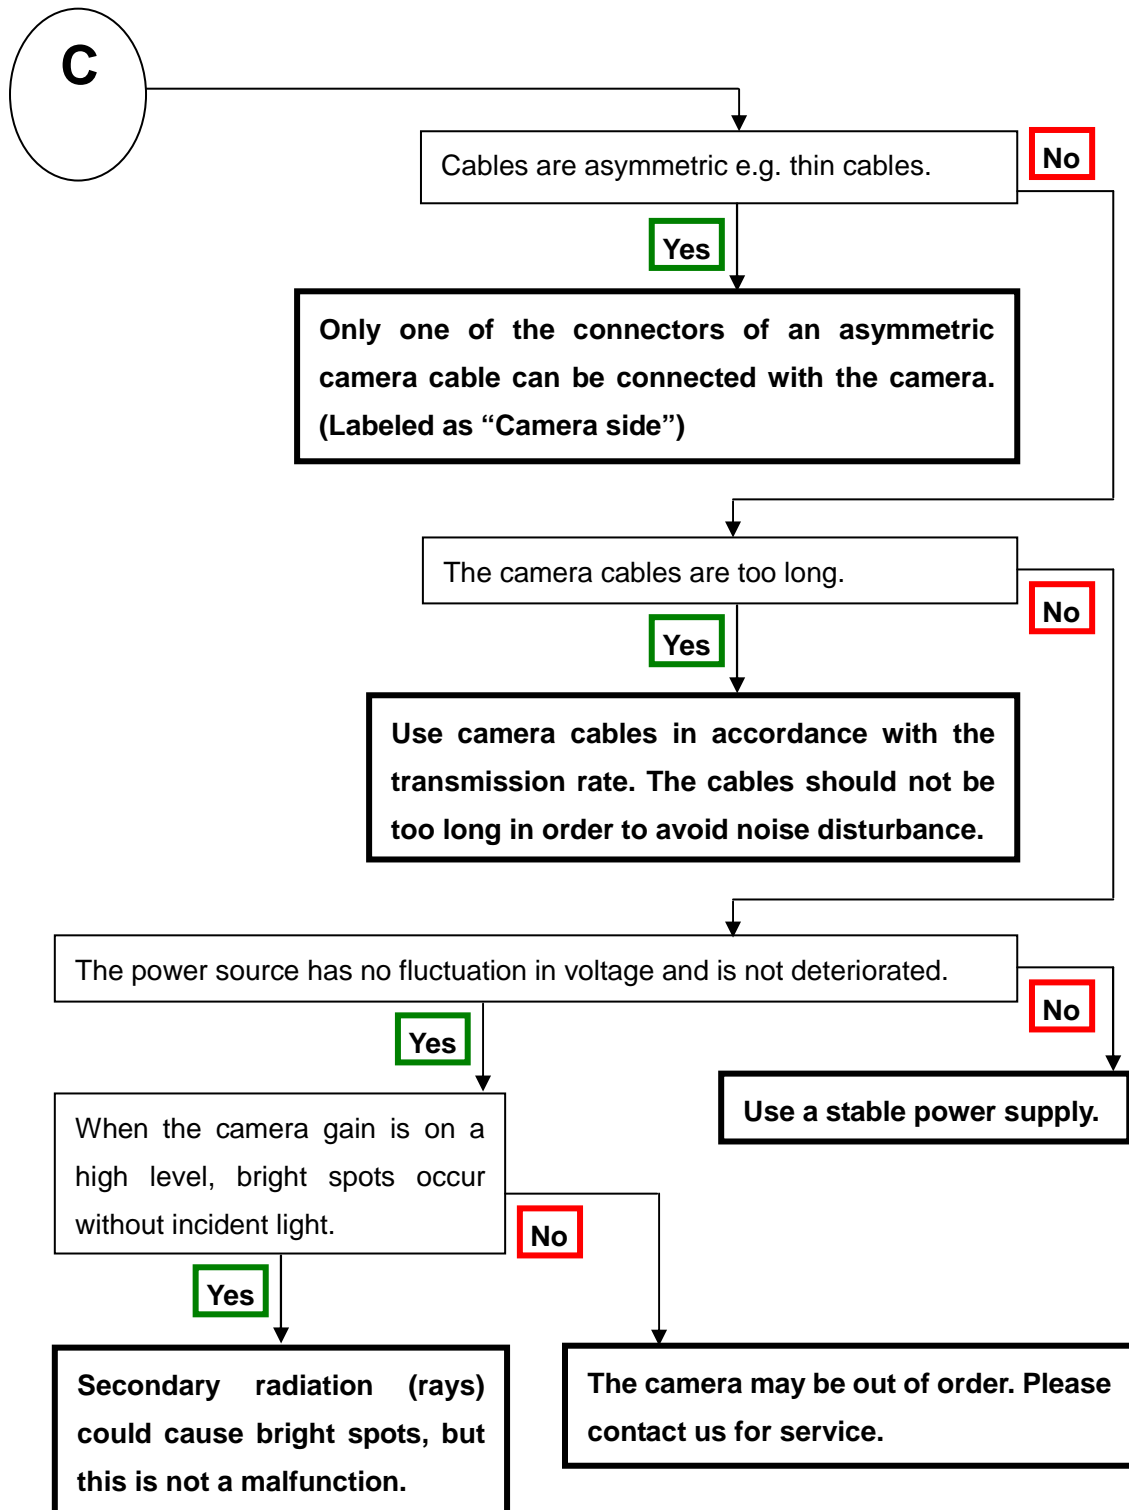

7.3 Camera becomes hot

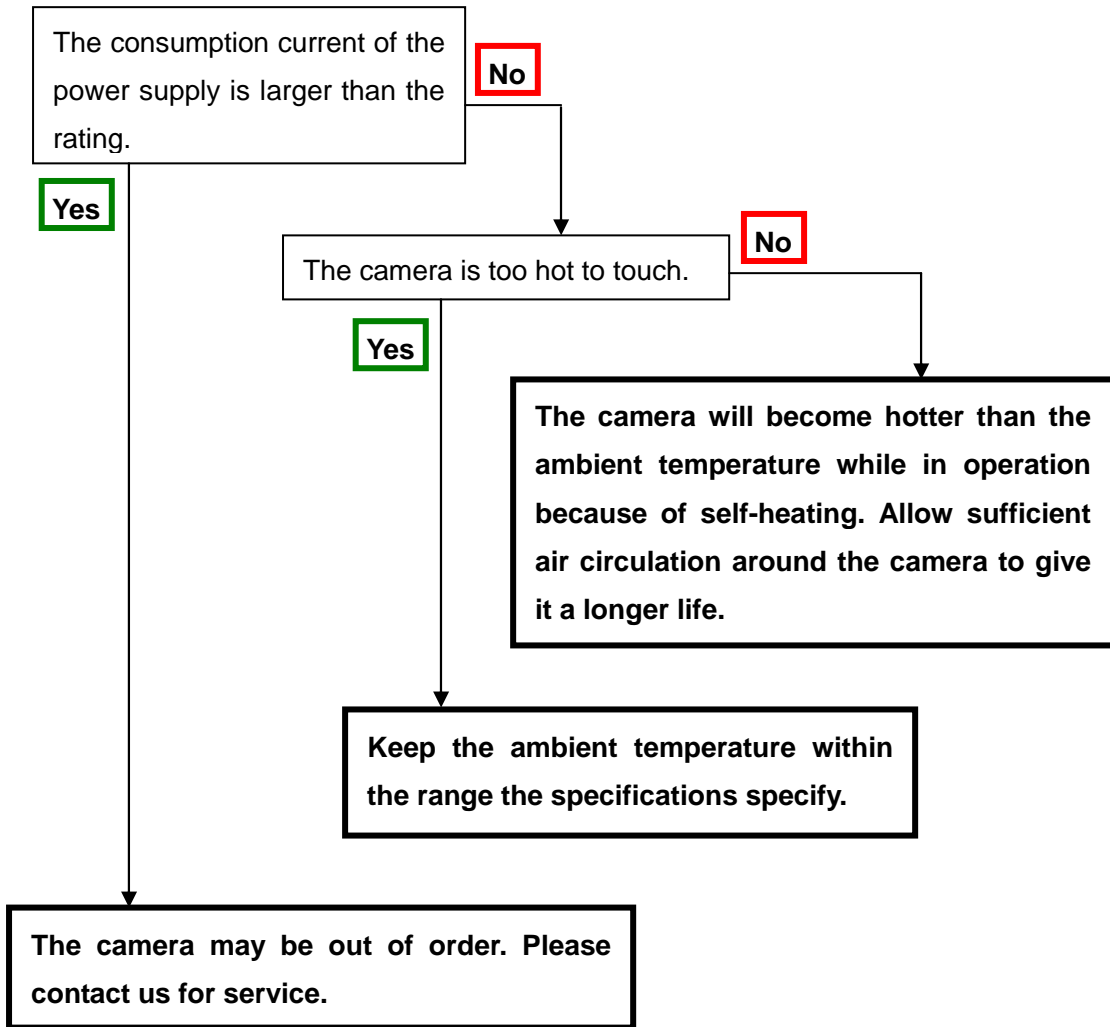

8 NCCtrl

8.1 Overview

NCCtrl02 is software designed for line scan cameras that support the NED camera control protocol (NCCP). This software enables you to remotely control line scan cameras from a PC.

The following interface connections are available:

- 1) COM port (RS232C)
- 2) Camera Link

8.2 System Requirements

PC: PC/AT compatible

OS: Microsoft Windows series (9x / NT / 2000 / XP)


Free disk space: 1 MB – 2 MB

(The required size may vary depending on the number of camera setting files)

The following system environment is required for the respective interfaces.

For COM port (RS232C) connection:

- 1) COM port that is compatible with the hardware and OS
- 2) RS232C cross cable (Dsub9s – Dsub9s)

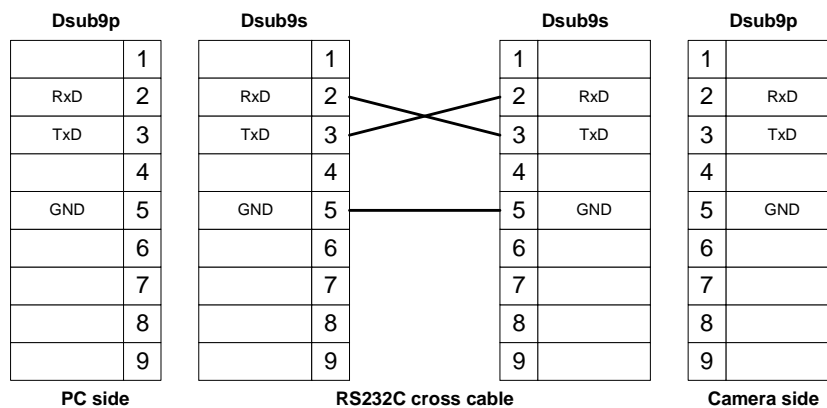

For Camera Link connection:

- 1) Camera Link compatible frame grabber board and device driver must be installed.
The DLL file for Camera Link API provided by the frame grabber manufacturer must be included. For details, ask the frame grabber manufacturer.
- 2) Camera Link compatible cable

8.3 Installaton

Insert the FD or CD-ROM (or other media) provided by NED into your PC.

Copy the NCCtrl02 folder into the desired location in your hard disk drive.


Note: In case you copy from CD-ROM you should cancel the read only attribute.

8.4 Uninstall

1) Delete NCCtrl02 folder and all data files that included in that folder.


8.5 Operation

8.5.1 General description

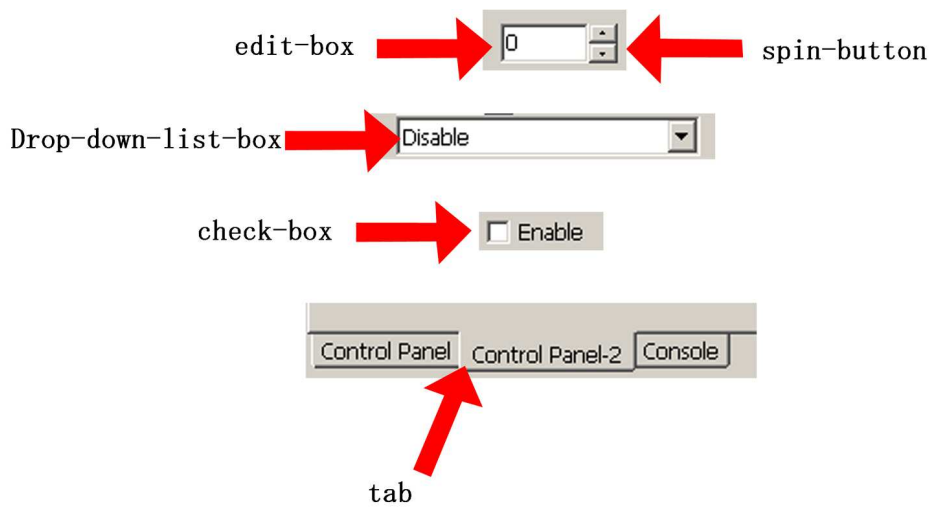


8.5.2 Starting NCCtrl02

Start Windows Explorer and double-click the NCCtrl02.exe icon.

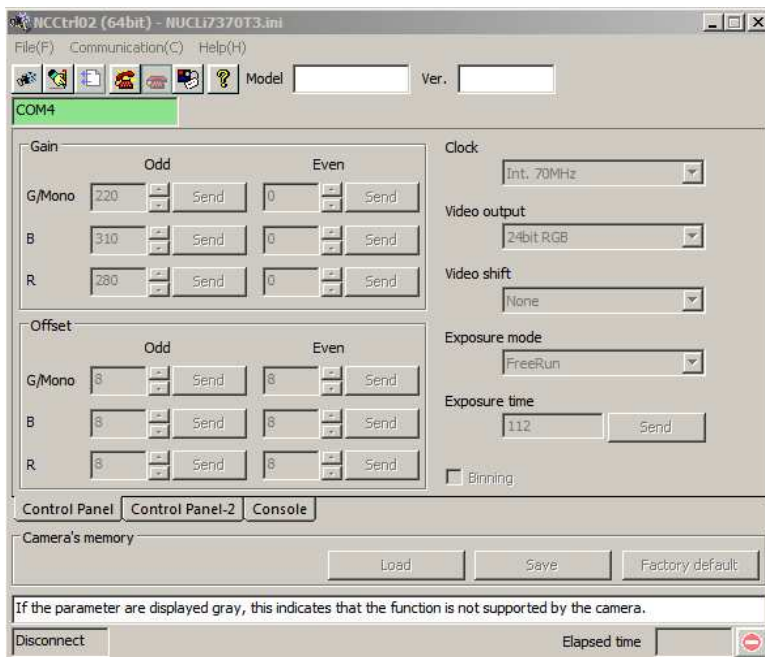


There are some buttons in the tool-bar. The function of each button is follows.

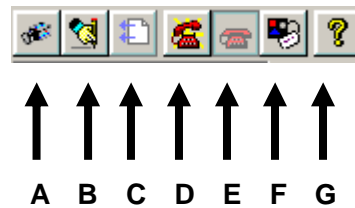

- A: Open a camera setting file (*.ini file)
- B: Export the parameters to text file (*.txt file)
- C: Load the parameters from a text file (*.txt file)
- D: Connect to the camera.
- E: Disconnect from the camera
- F: Communication settings
- G: Version information.

8.5.3 Open the control setting file

- 1) Click on tool-bar button "A".
- 2) Select the appropriate setting file (*.ini file) and click on the "Open" button.
- 3) The setting is loaded, and each control parameter is initialized.

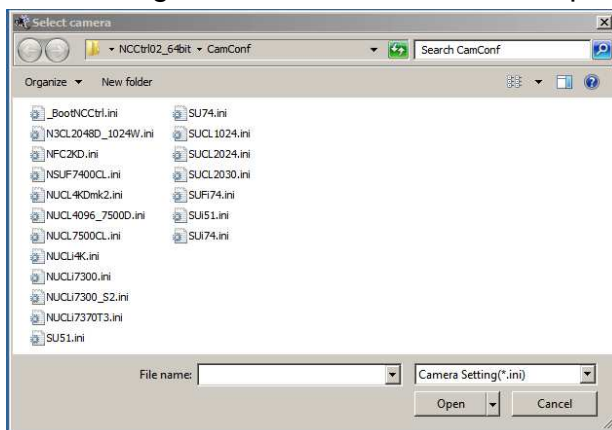


Note: **If the parameters displayed are gray, this indicates that the camera does not support the function.**

NCCtrl02 memorizes automatically the setting file name that was last opened. This file is automatically opened when NCCtrl02 is booted up.

8.5.4 Selecting interface and Timeout setting

8.5.4.1 Selecting interface

- 1) Click tool-bar button F.
- 2) Select the desired interface in the Drop-down-list-box.

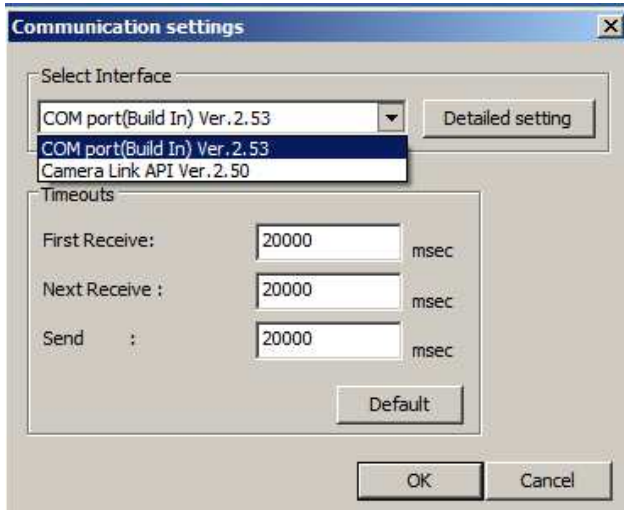


- 3) Using the “Detailed setting” button, you can change the interface setting.
- 4) Click on the “OK” button to complete this operation. Click on the “Cancel” button to cancel this operation.

Note: NCCtrl02 memorizes settings automatically. So you do not have to repeat this operation every time.

8.5.4.2 Setting the COM port

- 1) Set each item as follows. (NED standard)
Unless in cases where different settings have been specified.

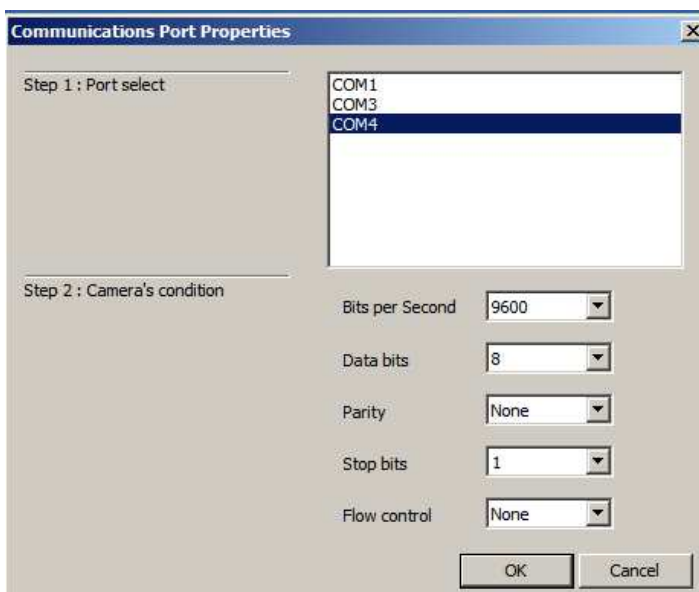


- (1) Port: Select connecting port.
- (2) Bits per Second: 9600
- (3) Data bits: 8
- (4) Parity: None
- (5) Stop bits: 1
- (6) Flow control: None

Note: Other parameter should not be used.


- 2) Click on the “OK” button to complete this operation.
Click on the “Cancel” button to cancel this operation.

Note: NCCtrl02 memorize settings automatically. So you do not have to repeat this operation every time.

8.5.4.3 Setting Camera Link

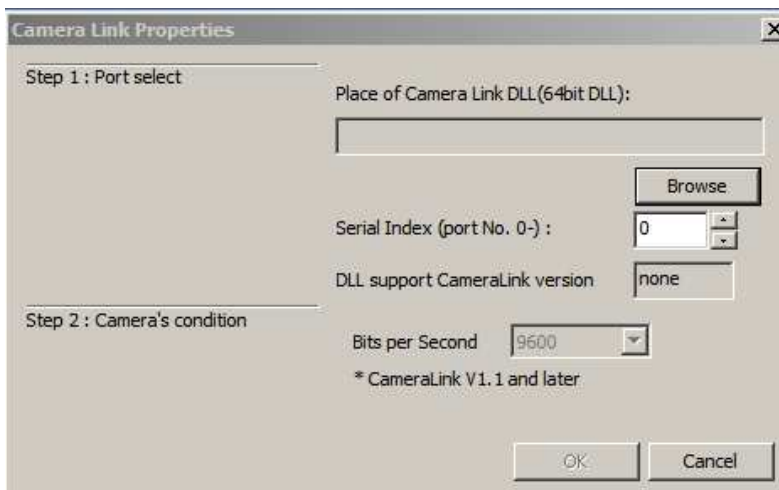

- 1) Enter the DLL file name of Camera Link API in the edit-box, or click “Browse” button and select DLL file.

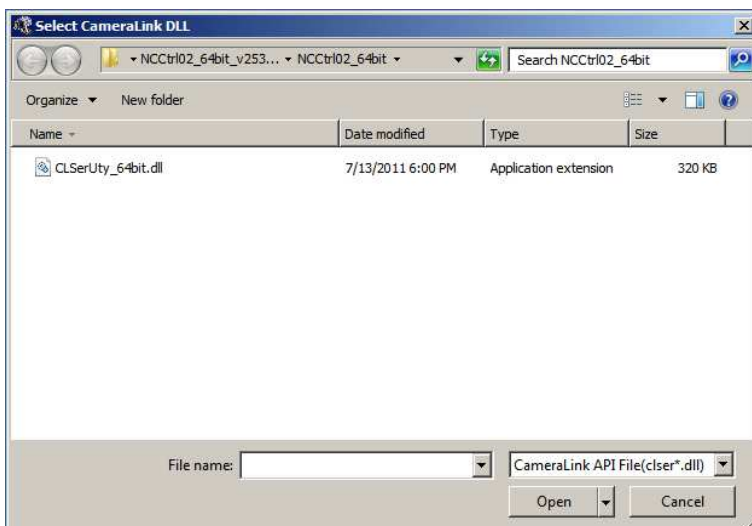


- 2) Enter value corresponding to the position of Camera Link cable to connect into the "Serial Index" column.
- 3) Click on the "OK" button to complete this operation.
Click on the "Cancel" button to cancel this operation.

Note: NCCtrl02 memorize settings automatically. So you do not have to repeat this operation every time.

Frame grabber manufacturers provide the DLL file for Camera Link API.
Some frame grabber boards are connected directly to the PC's COM port.
In this case, set the interface to COM port (RS232C).
For details, please inquire with the frame grabber manufacturer.

8.5.4.4 Setting Timeout

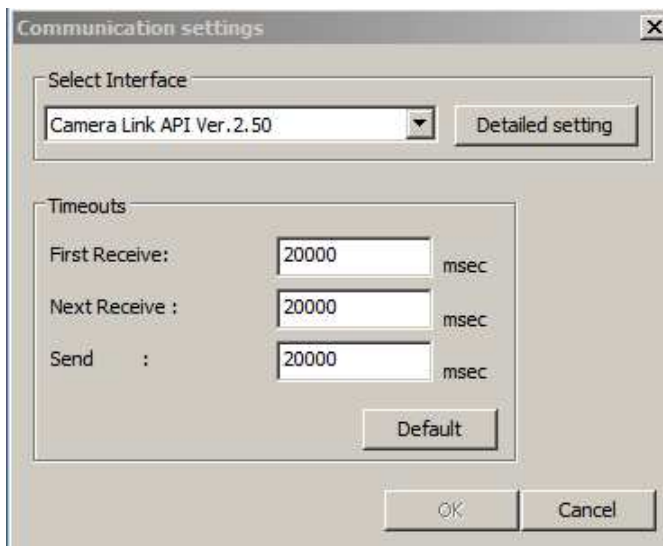


- 1) Enter timeout values to each edit-box in milliseconds.
Click "Default" button to restore all timeout values to default settings.
The meanings of each timeout are as follows.
First Receive: Maximum time, allowed to arrival of first characters after command transmission.
Next Receive: Maximum time, allowed to elapse between the arrivals of two characters.
Send : Maximum time, allowed to completing of command transmission.
- 2) Click on the "OK" button to save the setting.
Click on the "Cancel" button to cancel the setting.

Note: NCCtrl02 memorizes settings automatically. So you do not have to repeat this operation every time.


8.5.5 Connect

Click on tool-bar button D. Then you can control the camera.




8.5.6 Disconnect and exit program

Click on tool-bar button E. Then click the "X" button in the top right of the window.




8.5.7 Check the contents of communication

Click on the "Console" tab at the bottom of the window to confirm the settings.

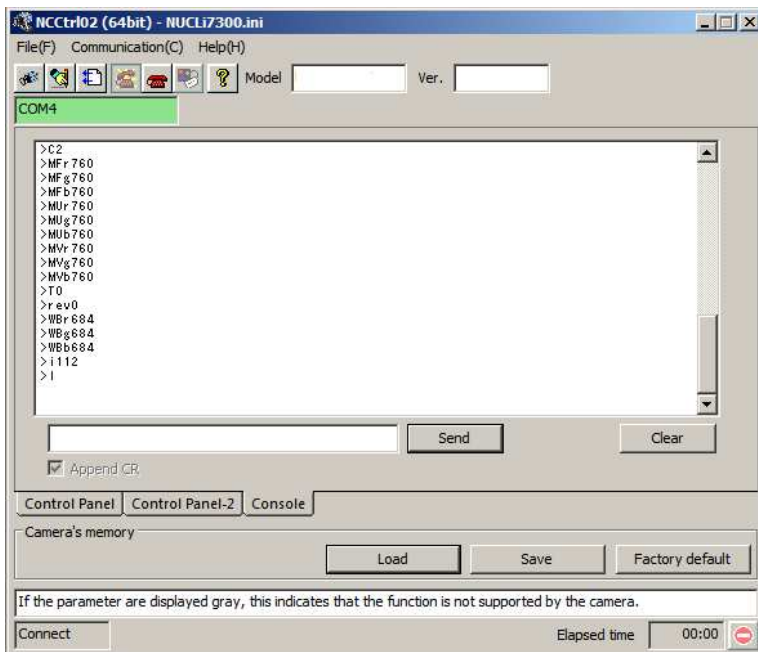

8.5.8 Export Parameters to text file


1) Click on tool-bar button B.

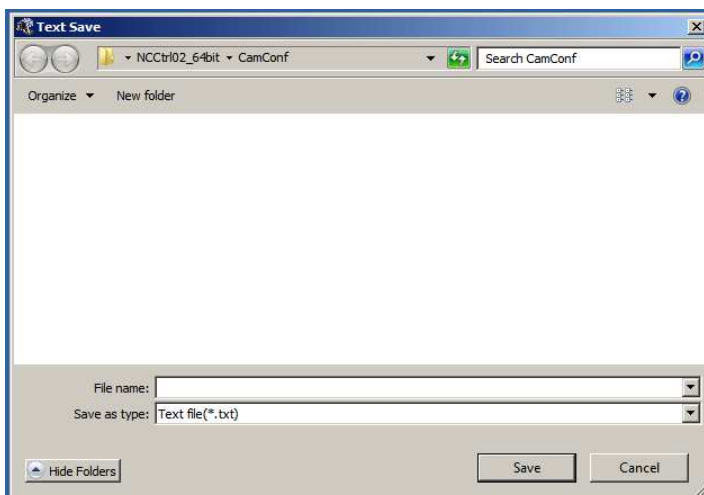

- 2) Input the desired file name and click on the “Save” button. The current settings value of each item is saved in text format.

8.5.9 Import Parameters from text file


- 1) Select menu “File” – “Text Load”

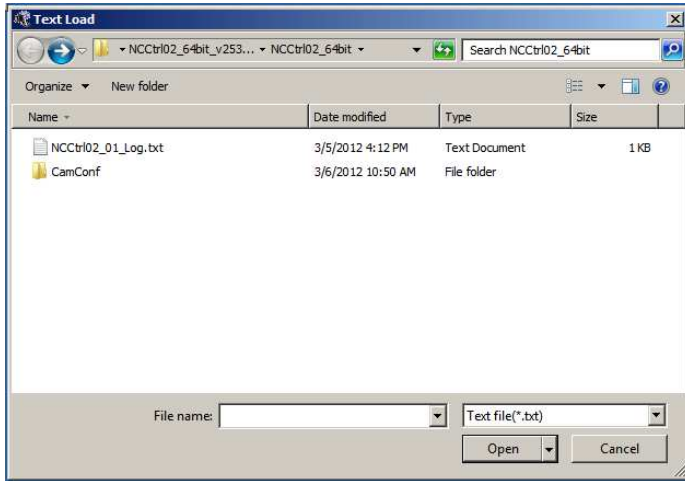


- 2) Select the file name and click on the “Open” button.
Each command written in the text file is executed sequentially.

8.6 Control

The controllable functions and range of values differ for every camera. For details, refer to the camera specifications.

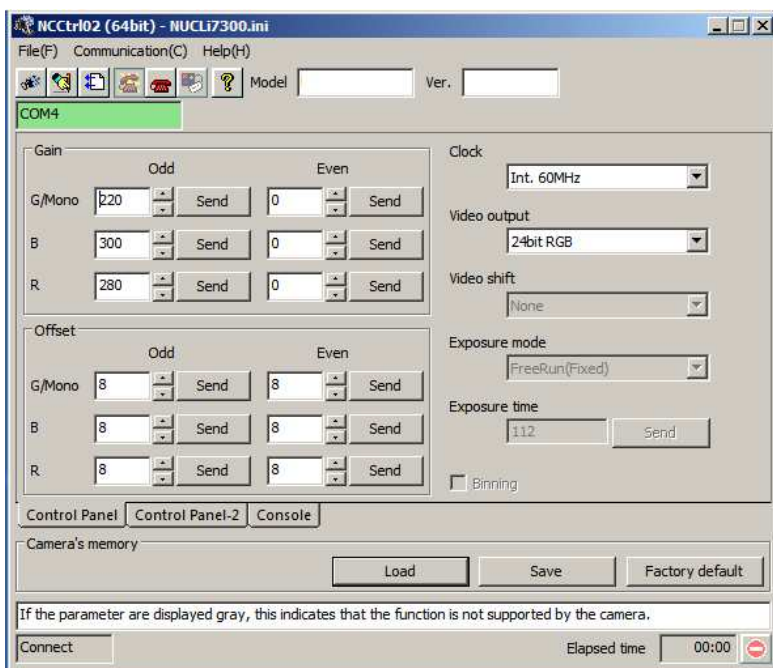

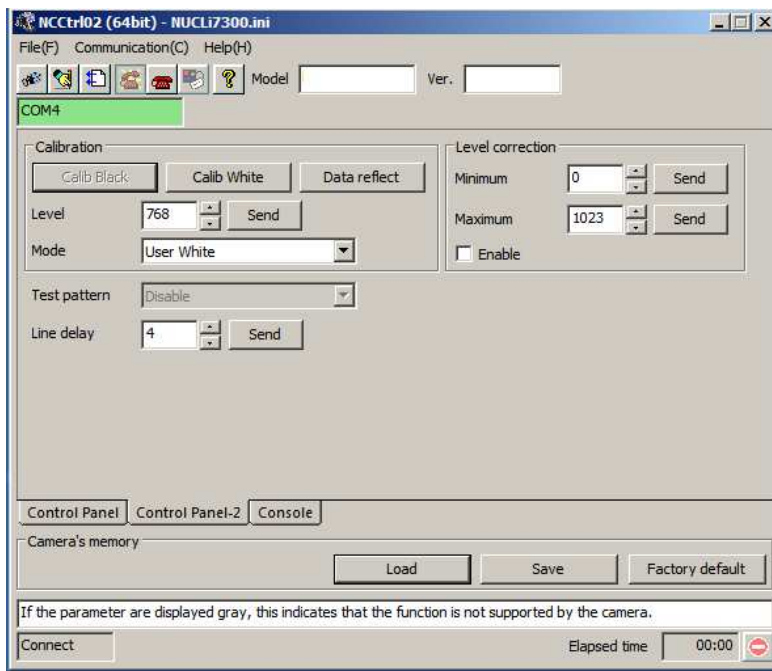


8.6.1 Gain and Offset

Gain		Odd	Even
G/Mono:	500	Send	0
B :	0	Send	0
R :	0	Send	0

Offset		Odd	Even
G/Mono:	0	Send	0
B :	0	Send	0
R :	0	Send	0

Enter the value directly into the edit-box or click on the spin-button to set the value. Then, click on the “Send” button to send the command to the camera.

8.6.2 Clock, Video output, Video shift, Exposure mode

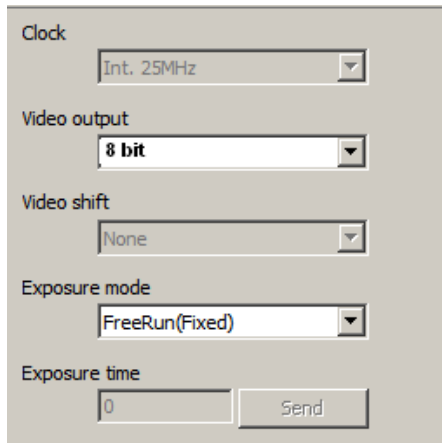


The screenshot shows a control panel with the following settings:

- Clock:** Int. 25MHz
- Video output:** 8 bit
- Video shift:** None
- Exposure mode:** FreeRun(Fixed)
- Exposure time:** 0

A "Send" button is located next to the Exposure time input field.

Every time you choose from the Drop-down-list-box, the command is sent to the camera.

8.6.3 Camera Memory



- a) "Load": Load data from camera memory
- b) "Save": Save data into camera memory
- c) "Factory default": Restore camera memory data to factory settings.

8.6.4 Pixel Correction

- ① Input the pixel correction target level 「M xxx」 in the input box on the console screen, and set it by pressing the **Send** button.
- ② Input 「W」 and click **Send** to apply the correction.
- ③ Input 「L」 and click **Send** when correction is complete to save the data in the camera memory.



8.7 Software Upgrades

When you received the newest software from NED,
Please execute the following procedure.

8.7.1 NCCtrl02 upgrades

- 1) Check the old version of NCCtrl is not in operation.
- 2) Uninstall old version. (See “8.4.Uninstall”)
- 3) Install new version. (See “8.3.Software installation”)

8.7.2 Adding/Replacing control setting file

- 1) Check the old version of NCCtrl02 is not in operation.
- 2) Copy the control setting file(*.ini) to NCCtrl02¥Camconf folder.

8.7.3 Adding/Replacing the interface Plug-in

- 1) Check the old version of NCCtrl02 is not in operation.
- 2) Copy the Plug-in file (*.dll) to the NCCtrl02 folder.

8.8 Data Transmission Programming

To make your own communication program, please refer to the sample programs in NCCtrl02¥SampleProgram folder.

8.9 Attention on use

- 1) Reproducing and distributing without notice part or all of this software and this manual is prohibited.
- 2) Reverse engineering, decompiling, disassembling and modifying without notice part or all of this software is prohibited.
- 3) The specification of this software and the contents of this manual may be changed by NED at any time without notice.

9 Others

9.1 Notice

- No part of this document may be reproduced in any form, in whole or in part, without the expressed written consent of NED.
- Contents of this document are subject to change without prior notice.
- Every care has been taken in the preparation of this User's Manual. If you should discover any errors or omissions, please notify your nearest NED representative.

9.2 Contact for support

Nippon Electro-Sensory Devices Corporation

Head Office

2-5-12, Itachibori, Nishi-ku, Osaka 550-0012, Japan

Phone +81-6-6534-5300

Fax +81-6-6534-6080

Tokyo Office

Gibraltar Ohi BLD., Room No.402

1-45-2, Ohi, Shinagawa-ku, Tokyo 140-0014, Japan

Phone +81-3-5718-3181

Fax +81-3-5718-0331

West Japan Office

Twin Square 1-8-28 Enokida, Hakata-Ku, Fukuoka, 812-0004, Japan

Phone +81-92-451-9333

Fax +81-92-451-9335

URL

<http://ned-sensor.co.jp/en>

E-Mail

sales@ned-sensor.com

9.3 Product Support

If there is still a problem with your camera after checking it in accordance with the troubleshooting guide, turn off the power and call your NED representative.

In such case, please inform us of the status of the camera. You can get the status by executing the “I” command.

The example of the camera status.

```
I
>OK
>Type=SUi7440
>Ver.=1.33
>FPGA_VER1 = 74400100
>FPGA_VER2 = 20130604
>gf162
>of1
>GF162
>OF1
>gb162
>ob1
>GB162
>OB1
>x0
>v0
>t0
>i4798
>C0
>M2048
>c0
>s0
>S4095
>T0
>I
```

Revision History

Revision Number	Date	Changes
01	20 Jun. 2014	Initial release
02	15 September 2016	(1)P15 :“M84.5x0.5 screw” was revised by “Nikon F mount”. (2)P15:Delete “Use two cables of the same length and the same manufacturer”.
03	15 September 2016	Delete “4.2.20 Setting Pixel Readout Direction”.